


ENG

Translation of the original operating instructions

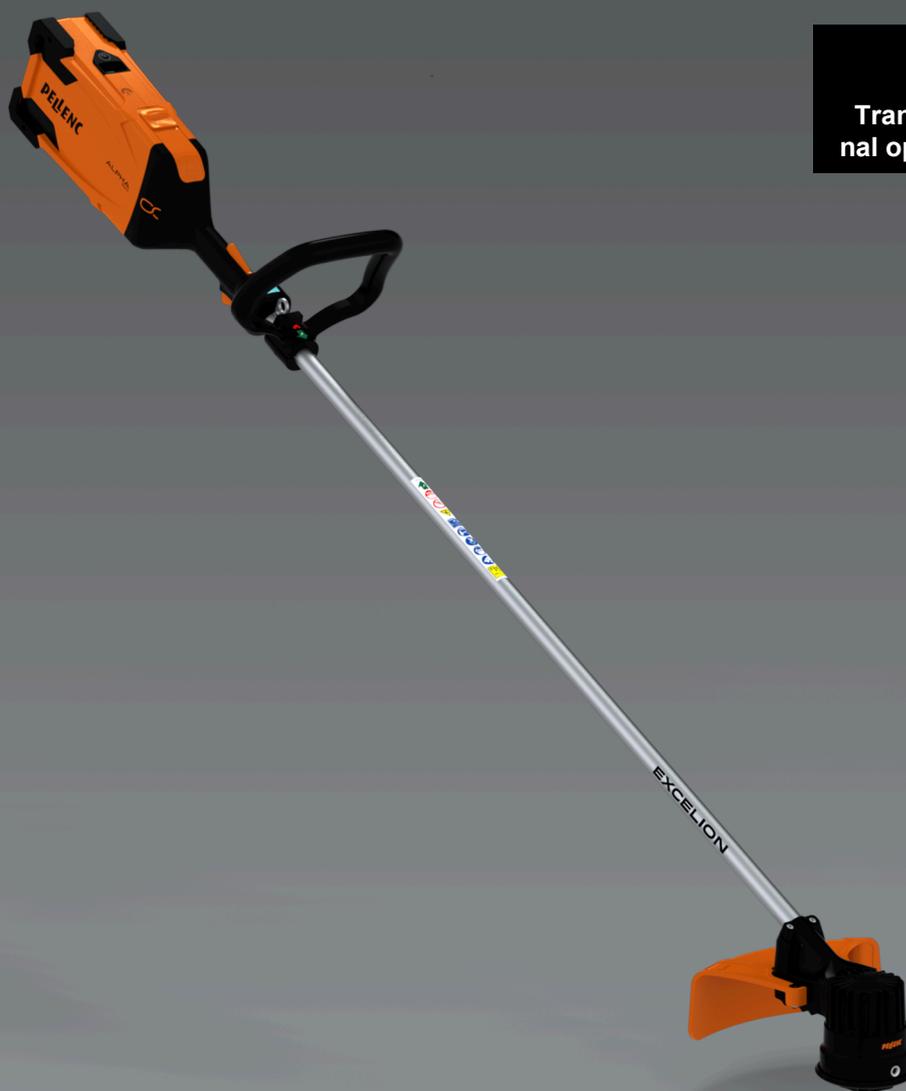

GRASS STRIMMER EXCELION ALPHA

Operating instructions

53_144013_C
08/2021

READ THE USER GUIDE CAREFULLY BEFORE USE

   #LOVEELECTRIC

PELLENC

TABLE OF CONTENTS

1. INTRODUCTION	5
2. SAFETY	6
2.1. GENERAL SAFETY WARNINGS	6
2.1.1. TRAINING	6
2.1.2. PREPARATION	6
2.1.3. OPERATION	6
2.1.4. MAINTENANCE AND STORAGE	7
2.2. SAFETY MEASURES ASSOCIATED WITH CHARGER AND BATTERY USE	7
2.3. SAFETY SIGNAGE	7
2.4. PERSONAL PROTECTION EQUIPMENT (PPE)	8
3. DESCRIPTION AND TECHNICAL FEATURES	9
3.1. DESCRIPTION OF THE TOOL	9
3.2. TECHNICAL FEATURES	10
4. COMMISSIONING	11
4.1. CONTENTS OF THE KIT	11
4.2. FITTING/REMOVING THE SAFETY CASING	11
4.2.1. FITTING THE PROTECTIVE GUARD	11
4.2.2. REMOVE THE PROTECTIVE GUARD	12
4.3. FITTING AND DISMOUNTING THE ROUND HANDLE	12
4.3.1. FITTING THE ROUND HANDLE	12
4.3.2. DISMOUNTING THE ROUND HANDLE	13
4.4. CONNECTING PELLENC BATTERIES	14
4.4.1. ALPHA 260 / 520 BATTERIES	14
4.4.2. ULIB 750 / 1200 / 1500 BATTERIES WITH COUNTERWEIGHT	14
4.5. DISCONNECTING PELLENC BATTERIES	16
4.5.1. ALPHA 260 / 520 BATTERIES	16
4.5.2. ULIB 750 / 1200 / 1500 BATTERIES WITH COUNTERWEIGHT	16
5. USING THE TOOL	17
5.1. ADJUSTING THE WORKING POSITION	17
5.1.1. ADJUSTING THE ROUND HANDLE	18
5.1.2. ADJUSTING THE CARRYING STRAP	19
5.2. SWITCHING ON PELLENC BATTERIES	20
5.2.1. ALPHA 260 / 520 BATTERIES	20
5.2.2. 750 / 1200 / 1500 ULIB BATTERIES	21
5.3. SWITCHING OFF PELLENC BATTERIES	22
5.3.1. ALPHA 260 / 520 BATTERIES	22
5.3.2. 750 / 1200 / 1500 ULIB BATTERIES	22
5.4. ADJUSTING THE CUTTING SPEED	23
5.4.1. CUTTING SPEED RECOMMENDATIONS	23
5.4.2. SPEED SELECTION	24

5.5. START-UP	24
5.6. ADJUSTING THE LENGTH OF THE STRIMMER WIRE	26
5.7. STRIMMING TECHNIQUES	26
5.7.1. BASIC MOWING/STRIMMING	26
5.7.2. STRIMMING ON SLOPES	27
5.7.3. STRIMMING ALONG WALLS, FENCES, AROUND TREES AND FLOWER BEDS	28
6. SERVICE	29
6.1. MAINTENANCE ADVICE	29
6.2. MAINTENANCE TABLE	29
6.3. CLEANING THE TOOL	29
6.4. REMOVING AND MOUNTING THE ALPHA CUT CUTTING HEAD	30
6.4.1. REMOVING THE ALPHA CUT CUTTING HEAD	30
6.4.2. MOUNTING THE ALPHA CUT CUTTING HEAD	31
6.5. STRIMMER WIRE	32
6.5.1. RECOMMENDED STRIMMER WIRE DIAMETERS	32
6.5.2. FITTING THE STRIMMER WIRE	32
7. INCIDENTS AND TROUBLESHOOTING	34
7.1. TABLE OF INCIDENTS AND BREAKDOWNS - TROUBLESHOOTING	34
7.2. SUMMARY OF DISPLAY SCREEN MESSAGES	35
7.3. THERMAL SAFETY SHUTDOWN	36
8. STORAGE AND TRANSPORT	37
8.1. STORAGE	37
8.2. TRANSPORT	37
9. ACCESSORIES AND CONSUMABLES	37
9.1. ACCESSORIES INCLUDED	37
9.2. OPTIONAL ACCESSORIES	38
9.3. CONSUMABLES	39
10. WARRANTIES	39
10.1. GENERAL WARRANTIES	39
10.1.1. STATUTORY WARRANTY	39
10.1.2. COMMERCIAL WARRANTYPELLENC	40
10.1.3. PAID AFTER-SALES SERVICE	41
11. COMPLIANCE STATEMENTS	42
11.1. "EC" DECLARATION OF CONFORMITY: EXCELION ALPHA	42
11.2. UK DECLARATION OF CONFORMITY ^{UK} _{CA} : EXCELION ALPHA	43

1. INTRODUCTION

Dear Customer,

Thank you for purchasing your Grass strimmer Excelion Alpha. Correctly used and maintained, this tool will give a satisfactory performance for many years.



Warning

Your device contains numerous recoverable or recyclable materials. Return it to your dealer or, failing this, to an approved servicing centre to be treated.



Comply with the regulations in force in your country as concerns environmental protection associated with your activity.



Warning

It is imperative that you read through the ENTIRE user's manual before using or servicing the tool. Always comply with the instructions and illustrations in the manual.

All through this user guide you will find advisory notes and information entitled: NOTE, IMPORTANT, ATTENTION and WARNING.

The points marked "NOTE" indicate additional information.

The points marked "IMPORTANT" warn the user of a potential risk to the equipment.

The points marked "ATTENTION" warn the user of a potentially hazardous situation which if not avoided leads to minor injuries.

The points marked "WARNING" warn the user of a potentially hazardous situation which if not avoided leads to serious injury or death.

The warning  indicates that damage resulting from failure to comply with the procedures and instructions is not covered by the warranty and the owner will be liable for any repair costs.

Safety indications are also given on the tool; they remind you of the safety precautions to be taken. Identify and read these indications before using the tool. Immediately replace any indications that may become partially illegible or deteriorated.

Refer to Section 2.3, "Safety signage" for the location diagram of the safety stickers affixed to the tool.

No part of this manual may be reproduced without the written permission of the company PELLENC. The illustrations given in this manual are for information purposes and are in no way contractual. The PELLENC company reserves the right to make any modification or improvement to its products as deemed necessary without informing customers already in possession of a similar model. This manual forms an integral part of the tool and must accompany the tool if it changes hands.

2. SAFETY

2.1. GENERAL SAFETY WARNINGS



Warning

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Note

Retain all the safety measures and instructions for later reading.

This device is not intended for use by individuals (including children) with reduced physical, sensory or mental capabilities, nor by anyone lacking in experience or knowledge, except if they are supervised or have received prior instructions from a person responsible for their safety.

- Your Grass trimmer Excelion Alpha is a professional tool whose use is reserved exclusively for cleaning of green spaces (grass, dense grasses, woody weeds and brambles).
- The PELLENC SAS company accepts no responsibility for any damage caused by improper or unspecified use different from its original intention.
- The PELLENC SAS company accepts no responsibility for any damage caused by the use of non-original parts or accessories.

Operating rules to be respected for your safety when using lawn mowers with electric motors.

2.1.1. TRAINING

1. Read the instructions carefully. Become familiar with the controls and the proper use of equipment.
2. Never allow children or individuals who are unfamiliar with these instructions to use the machine. National regulations may restrict operator age.
3. Never operate the machine while other people, especially children, or pets, are nearby.
4. Keep in mind that the operator or user is responsible for any accidents caused by them and the dangers that other people or their property may run.

2.1.2. PREPARATION

1. During operation of the machine, always wear protective footwear and long trousers. Do not operate the machine barefoot or in sandals. Avoid wearing loose clothing or items with loose cords, or a tie.
2. Inspect the entire area where the machine will be used and remove all objects that might be thrown by it.
3. Before use, always visually inspect the machine to ensure that its cutting elements, bolts and the assembly in general, are not worn or damaged. Replace sets of worn or damaged components in order to maintain proper balance. Replace damaged or difficult to read labels.
4. Before use, check the power cable to detect signs of damage or aging. Immediately disconnect the battery if the cable becomes damaged during use. **Do not touch the cable before turning off the battery.** Do not use the machine if the cable is damaged or worn.

2.1.3. OPERATION

1. Only operate the machine in daylight or in good artificial light. Use safety equipment. Always wear eye protection.
2. Avoid operating the machine on wet grass. Remove any adjusting wrenches before switching the tool on.

3. Always place your feet firmly when on slopes.
4. Walk, never run.
5. Mow transversely on slopes, never up and down.
6. Be very careful when changing direction on slopes.
7. Do not mow excessively steep slopes.
8. Use the machine with extreme caution when using it in reverse or pulling it toward you.
9. Turn off the cutting elements if the machine has to be tilted for transport through non-grassy areas and when it has to be transported to or brought back from the location where it is to be used.
10. Never use the machine with defective guards or without safety devices in place, for example deflectors and/or grass catchers.
11. Start the engine, drive carefully according to instructions and with your feet at a safe distance from the cutting elements.
12. Do not put hands or feet near or under rotating parts. Never allow the ejection opening to get clogged.
13. Do not transport the machine while the power source is attached.
14. To stop the machine, turn off the battery and remove the battery connector. Make sure all moving parts have completely stopped.
15. Stop the machine and remove the power-off device. Make sure all moving parts have completely stopped
 - before leaving the machine,
 - before cleaning any jams, or emptying the chute,
 - before checking, cleaning or repairing the machine,
 - after hitting an object inspect the machine to detect any damage and carry out repairs before restarting and using it.

If the machine begins to vibrate abnormally, it is essential at once to:

- inspect the machine to see if it is damaged,
- check if any parts have worked loose, and tighten them if necessary,
- repair or replace any damaged parts.

2.1.4. MAINTENANCE AND STORAGE

1. Make sure all nuts, bolts and screws are kept tight to be sure that the equipment is in good operating condition.
2. Check for wear or damage to the grass catcher frequently.
3. Replace worn or damaged parts so that the machine remains safe.
4. Take all precautions necessary when it comes to multi-blade machines, since the rotation of one cutting element can cause all the others to rotate.
5. When adjusting the machine, avoid getting fingers caught between the moving blades and the fixed parts.
6. Always allow the machine to cool down before storing.
7. Pay attention during routine maintenance of the cutting elements, as they may still be moving, even if the power source is cut off.
8. Replace worn or damaged parts so that the machine remains safe. Only use certified spare parts and accessories.

2.2. SAFETY MEASURES ASSOCIATED WITH CHARGER AND BATTERY USE

Important

Please refer to the tool battery instructions.PELLENC

2.3. SAFETY SIGNAGE



LwA sound power level guaranteed.



Risk of projections.



Read the user guide.



Do not use a blade.



Safety goggles, hearing protection and a helmet are compulsory.



IP54 protection index for the tool in working position with battery or counterweight (Protection against dust and water projections in all directions).



Gloves, safety pants and safety shoes are compulsory.



Orientation direction of the round handle (see Section 4.3, "Fitting and dismantling the round handle").



Safety distance of 15 m is compulsory.



Orientation direction of the round handle (see Section 4.3, "Fitting and dismantling the round handle").




Be sure to check the direction and speed of rotation of the cutting head.




Orientation direction of the round handle (see Section 4.3, "Fitting and dismantling the round handle").

2.4. PERSONAL PROTECTION EQUIPMENT (PPE)

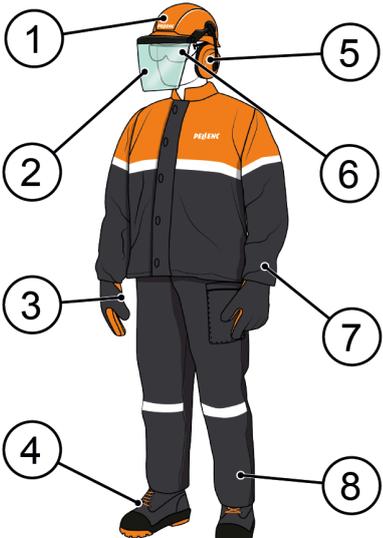	Equipment	Wearing of	Description
	1 Safety helmet	Recommended	Mandatory if there is a risk of falling objects
	2 Protective visor	Recommended	Risk of projections.
	3 Protective gloves	Recommended	Risk of projections.
	4 Robust, non-slip safety shoes	Mandatory	When operating the machine, always wear non-slip safety shoes. Do not operate the machine in bare feet or with sandals.
	5 Ear protection	Mandatory	Wear approved hearing protection with sufficient noise attenuation. Prolonged exposure to noise can cause permanent hearing damage.
	6 Safety goggles	Mandatory	Wear approved eye protection.
	7 Jacket or over-sleeves	Recommended	Risk of projections.
	8 Work trousers	Recommended	Always wear clothing that covers the operator's legs when the machine is in operation.

3. DESCRIPTION AND TECHNICAL FEATURES

3.1. DESCRIPTION OF THE TOOL

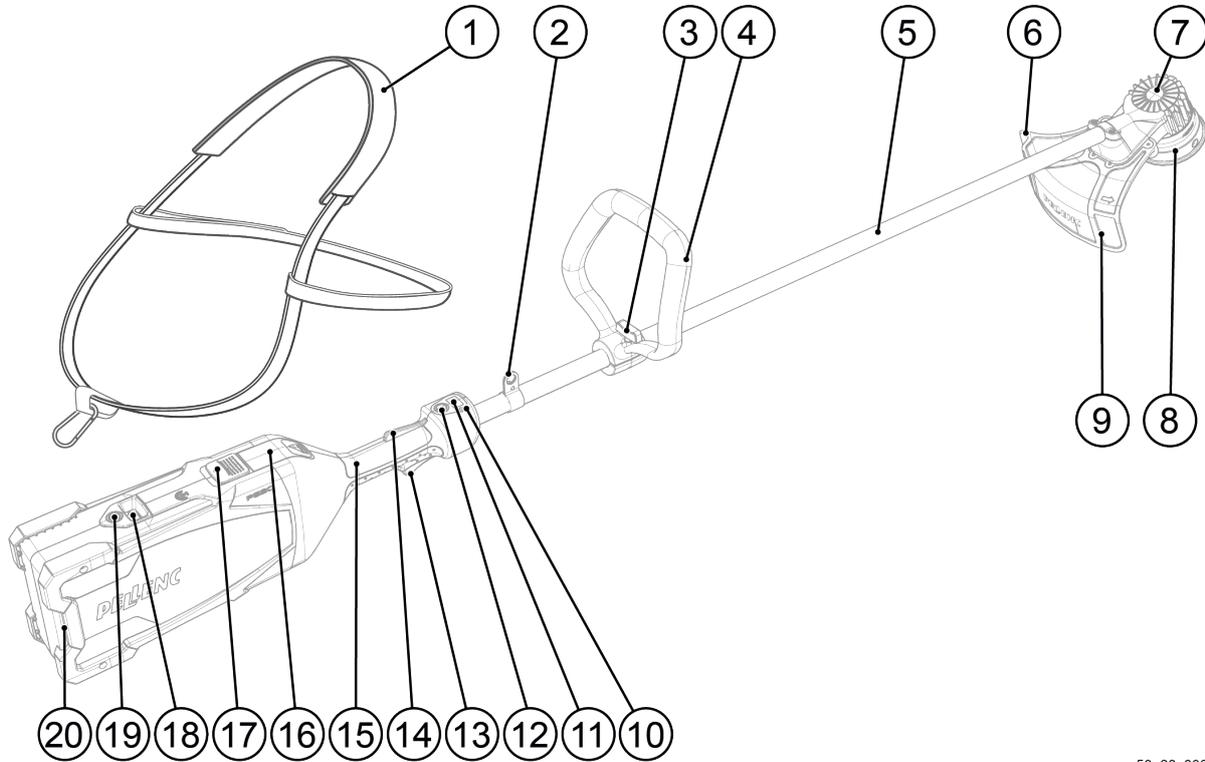

53_20_033

1. Carrying strap.
2. Carrying eyelet: allows attachment of the carrying strap.
3. Round handle knob: used to lock the round handle position.
4. Round handle: helps guide the grass strimmer.
5. Tube.
6. Strimmer wire-cutter plate: Automatically cuts the strimmer wire to the recommended length.
7. Motor protective casing: protects the motor and the electronic board, and dissipates heat.
8. ALPHA CUT cutting head.
9. Protective guard: limits the projection of solid objects (stones, pieces of metal) towards the operator.
10. LEDs: display the selected speed
11. Tool handle digital display: displays information related to the battery and the tool (Charge rate, faults, etc.).
12. Tool handle On / Off button: used to turn the tool on or off, and to select the speed.
13. Control trigger: allows the rotational speed of the cutting head to be progressively increased/decreased.
14. Safety trigger: prevents inadvertent actuation of the control trigger.
15. Handle.
16. Battery locking clip.
17. Battery safety lock.
18. Digital battery display: displays information related to the battery.
19. Battery On / Off button: turns the battery on or off.
20. Battery Alpha 260 / Alpha 520 (supplied separately).

3.2. TECHNICAL FEATURES

Model	EXCELION ALPHA
Power	900 W
Power supply voltage	43.2 V
Weight (excluding cutting head and safety casing)	2.6 kg
Weight with cutting head and safety casing	3.1 kg
Dimensions (L x W x H) in mm (excluding battery)	1715 x 272 x 379
Dimensions (L x W x H) in mm with battery	1890 x 272 x 379
Dimensions (L x W x H) in mm with counterweight	1776 x 272 x 379
Cutting diameter	400 mm
Rotational speeds	2000 to 6400 rpm
Battery life	According to use and battery type

* Optimal operation will be achieved with a Pellenc ALPHA 260 or 520 battery.

Determination of the noise levels and vibration rates is based on the operating conditions at the nominal maximum speed.

Maximum weighted sound pressure level A (ref. 20 µPa) at the user's position (uncertainty of K = 1.5 dB)	$L_{pa} =$ 79dB (A)	$K =$ 2,5 dB(A)
Weighted peak sound pressure level C (ref. 20 µPa) at the user's position	$L_{pC} < 130$ dB(C)	

Values determined according to the acoustic measurement standards EN 50636-2-91, EN 11201 and EN 3744.

Symbol	Value	Unit	Reference	Remark
L_{WAm}	92	dB(A)	1 pW	Measured sound power level
L_{WAg}	94	dB(A)	1 pW	Guaranteed sound power level

Vibration emission values according to EN 50636-2-91.

	Values on control handle in m/s ²	Values on round handle in m/s ²
Speed 1	0.68	1.87
Speed 2	0.78	1.73
Speed 3	0.69	1.67

*Measurement uncertainty: K = 1.5 m/s²

4. COMMISSIONING

For information about mandatory PPE when handling your tool, refer to Section 2.4, “Personal Protection Equipment (PPE)”.

4.1. CONTENTS OF THE KIT

Make sure the kit contains:

- A grass strimmer fitted with:
 - 1 ALPHA CUT cutting head (8)
 - 1 spool of Ø 2.4 mm strimmer wire
 - 1 carrying eyelet (2)
 - 1 carrying strap (1)
 - 1 round handle (4)
- 1 protective safety casing and its 4 screws (9)
- 1 Torx 25 wrench
- 1 operating instructions manual
- 1 warranty notice

4.2. FITTING/REMOVING THE SAFETY CASING




Caution

Always disconnect the battery before performing maintenance on the cutting head.

4.2.1. FITTING THE PROTECTIVE GUARD


1. Position the protective guard and the 4 screws.

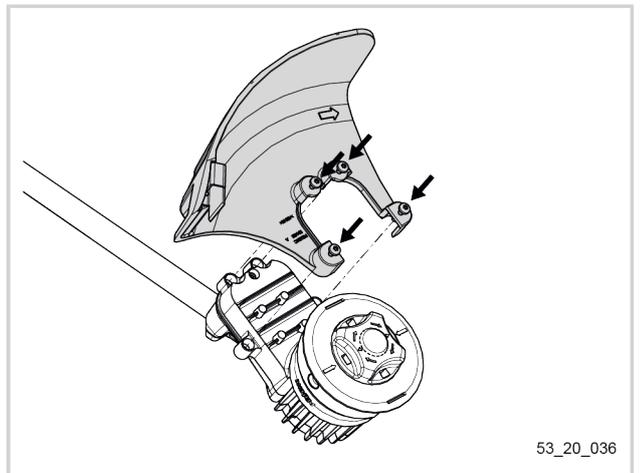

2. Tighten the 4 screws to a torque of 3.5 N.m using a T 25 screwdriver.


 T25 screwdriver

 3.5 N.m

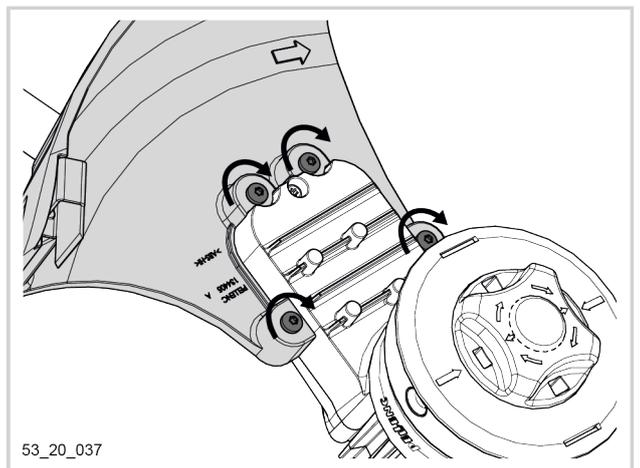

4.2.2. REMOVE THE PROTECTIVE GUARD


1. Unscrew the 4 screws using a T25 screwdriver.
2. Remove the protective guard and the 4 screws

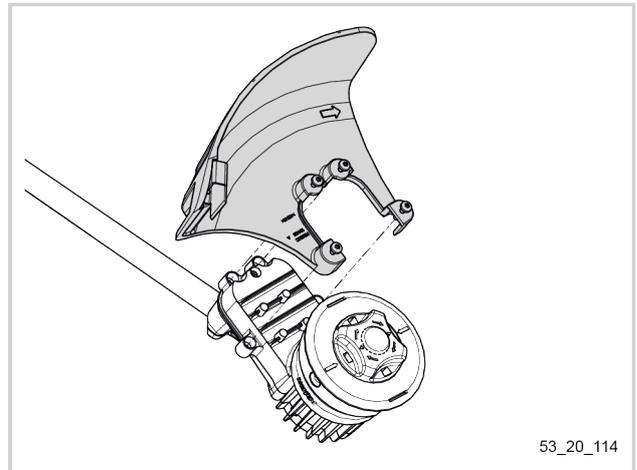

4.3. FITTING AND DISMOUNTING THE ROUND HANDLE

4.3.1. FITTING THE ROUND HANDLE

1. Position the round handle (4) on the tube (5).

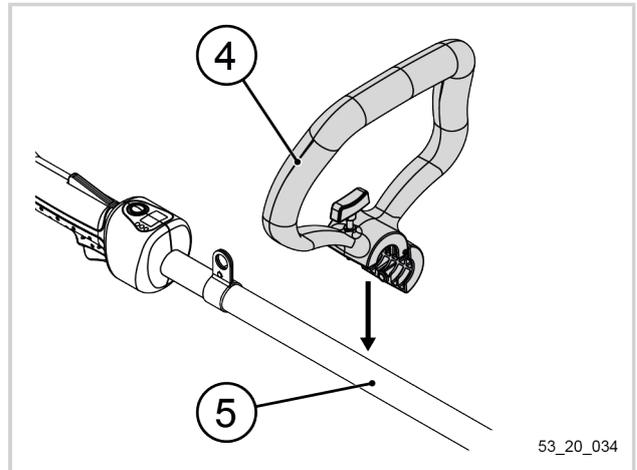


Caution

Depending on the tool version:


1. The tip of the green arrow (B) on the round handle (4) should point in the direction of the green arrow (A) on the tube (5).

or

2. If there is no visual indication, the knob (3) should be on the battery side.

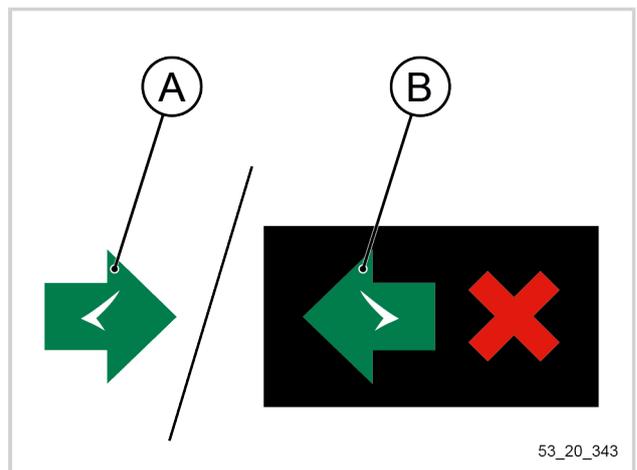


3. Close the base of the round handle (21).
4. Tighten the knob (3) of the round handle.

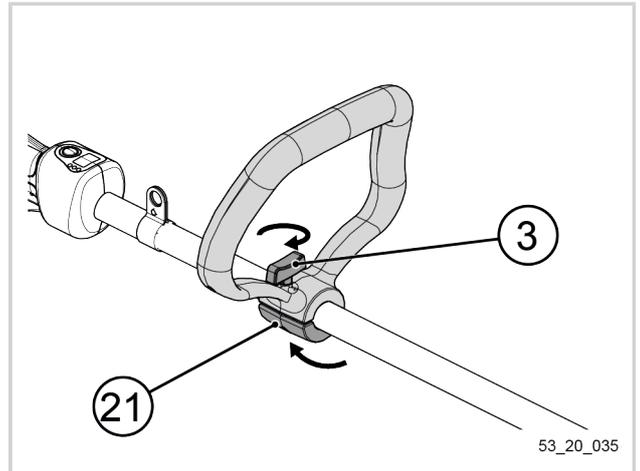


4.3.2. DISMOUNTING THE ROUND HANDLE

1. Loosen the knob (3) of the round handle.
2. Open the base of the round handle (21).

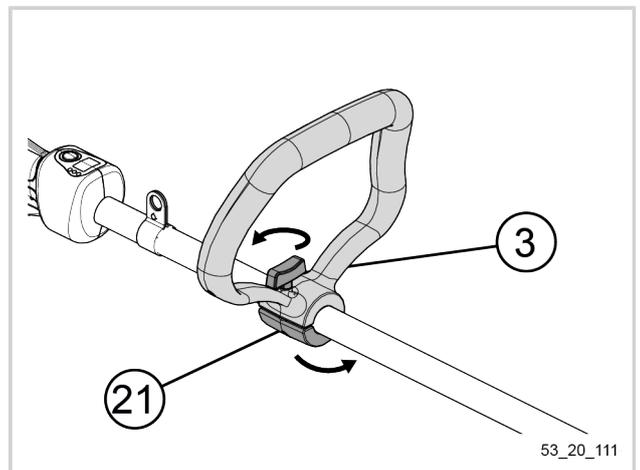

3. Remove the round handle (4).

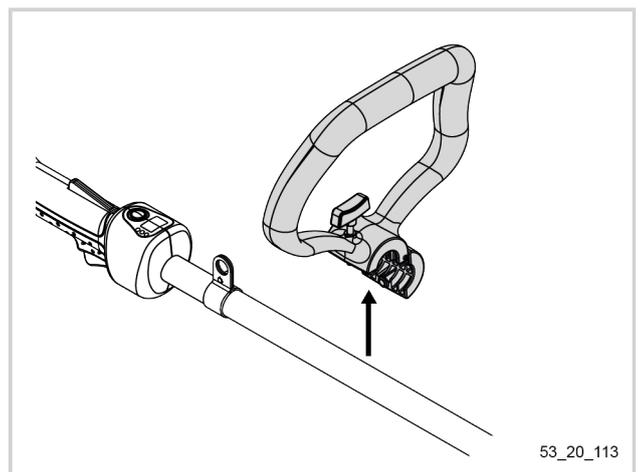

4.4. CONNECTING PELLENC BATTERIES

Important

Always check the remaining battery-life before use. If necessary, recharge the battery using the charger.

To prolong the life of the connectors, it is advisable to protect them when they are disconnected. Avoid leaving the connectors in contact with abrasive or dirty surfaces, or subjecting them to major impacts (falls).

For more information on PELLENC batteries see the battery instructions.


Note

When the battery is connected to the tool, the information appears on the tool's handle digital display and disappears from the battery's digital display.

4.4.1. ALPHA 260 / 520 BATTERIES

Connecting the battery to the tool:


1. Position the battery with the digital display of the battery facing up.
2. Push in the battery until the locking clip engages and the safety lock is closed.

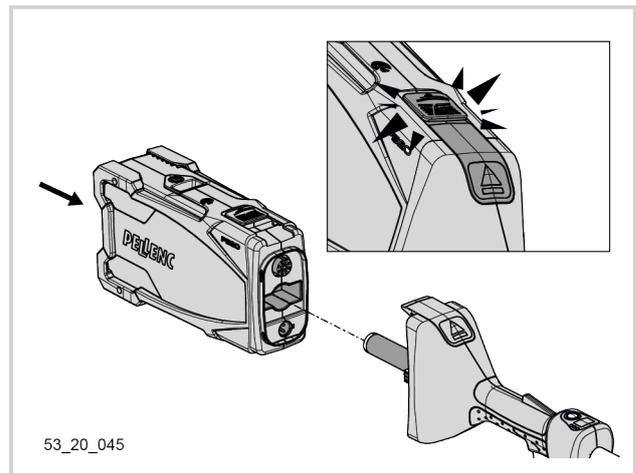


4.4.2. ULIB 750 / 1200 / 1500 BATTERIES WITH COUNTERWEIGHT

Attaching the counterweight to the tool:


1. Push in the counterweight until the locking clip engages and the safety lock is closed.

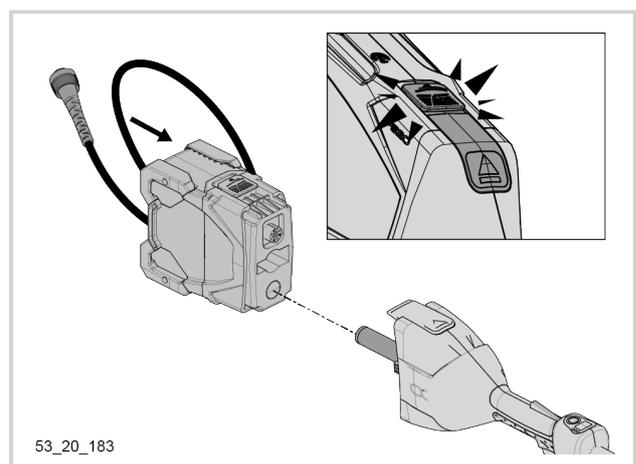


2. Place the battery in the harness (see harness instruction manual).
3. Connect the extension cord (29) to the battery.
4. Lock the connector by screwing the safety ring.

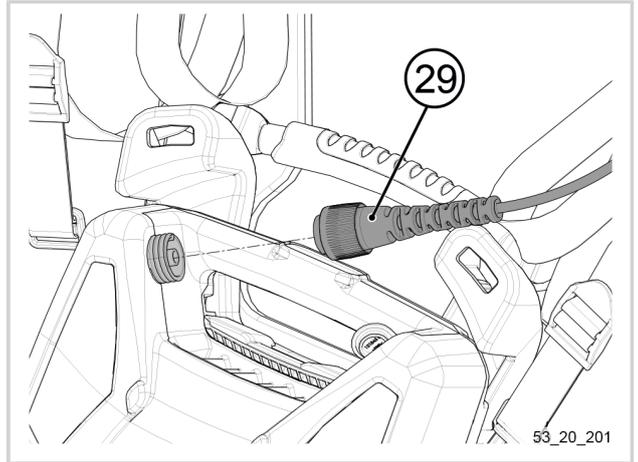


5. Put on the harness (see harness instruction manual).
6. Depending on the battery model and the position of the connector on the battery, the extension cord (29) must be passed through one of the shoulder straps or through the belt.

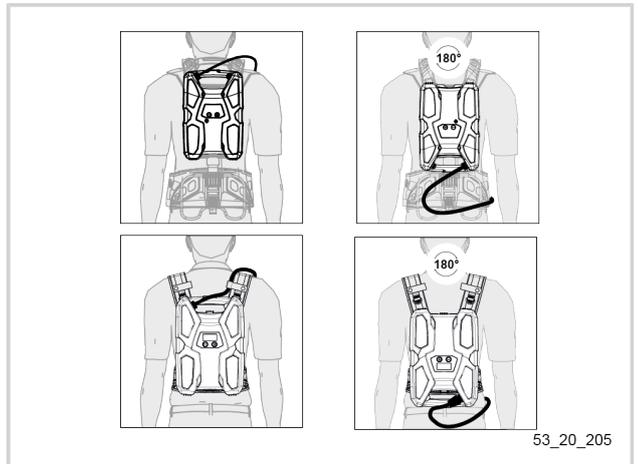

7. Insert the pin of the quick connector into the buckle of the harness.
8. Turn the quick connector a quarter turn to hold it in position.

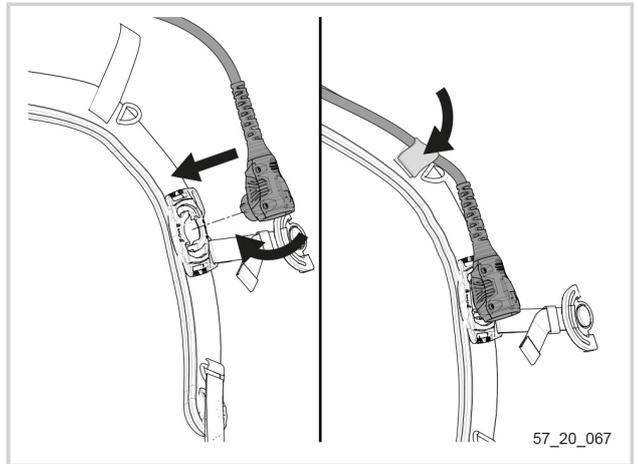

9. Connect the power cord (28) of the counterweight to the extension cord (29).

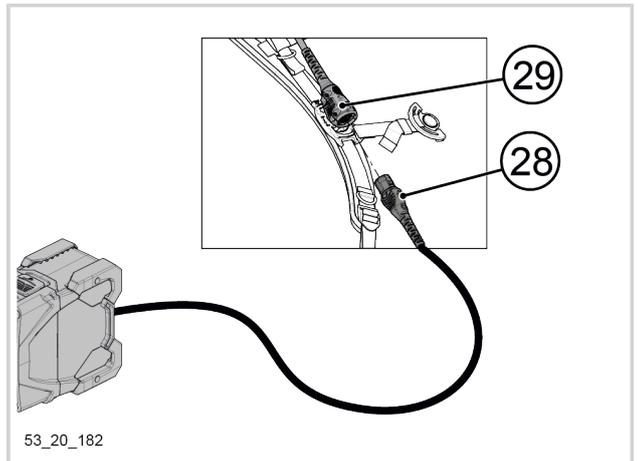


4.5. DISCONNECTING PELLENC BATTERIES

4.5.1. ALPHA 260 / 520 BATTERIES


Disconnecting the battery from the tool:

1. Pull the security lock to open it.
2. Press the locking clip while keeping the safety lock open.
3. Pull out the battery.

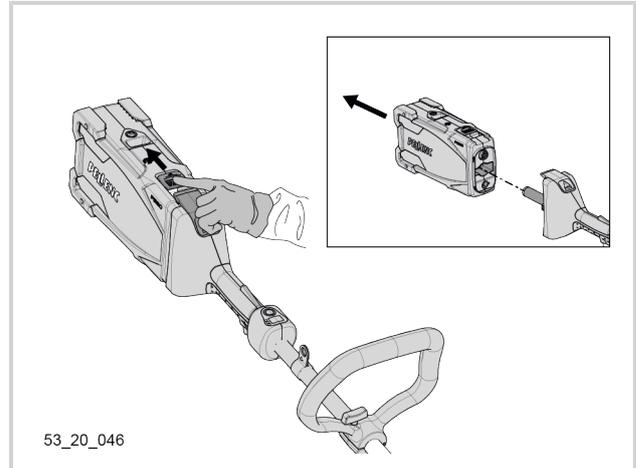


4.5.2. ULIB 750 / 1200 / 1500 BATTERIES WITH COUNTERWEIGHT


1. Disconnect the power cord (28) of the counterweight from the extension cord (29).

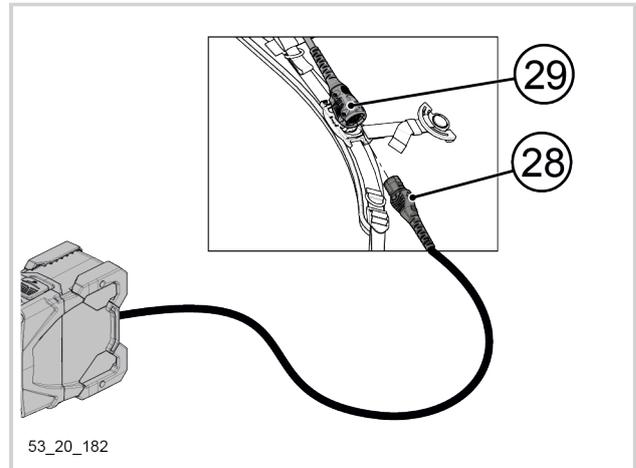

2. Turn the quick connector a quarter turn to remove the extension cord (29) from the shoulder strap or harness belt.

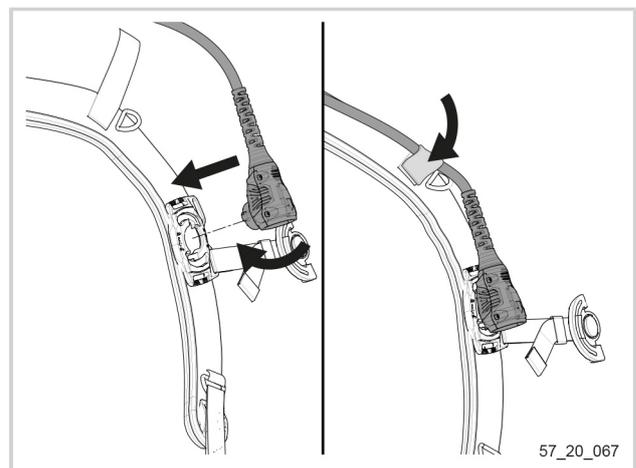


3. Remove the harness (see harness instruction manual).
4. Disconnect the extension cord (29) from the battery.
5. Remove the battery from the harness (see harness instructions).

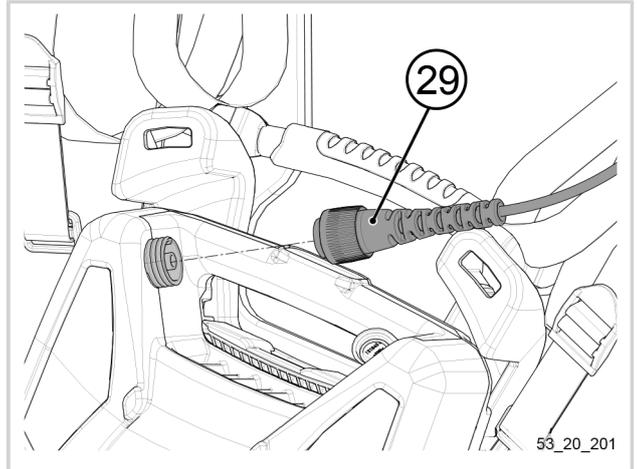

53_20_201

Detach the counterweight from the tool:

6. Pull the security lock to open it.
7. Press the locking clip while keeping the safety lock open.
8. Pull out the counterweight.

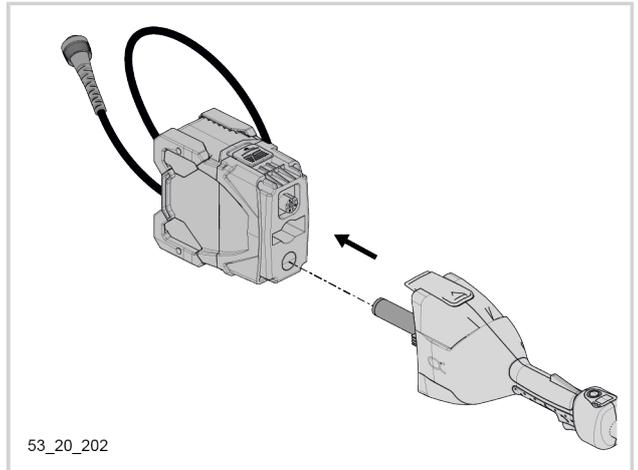

53_20_202

5. USING THE TOOL

5.1. ADJUSTING THE WORKING POSITION

The working position must be adjusted according to the size of the operator.

It should allow easy use requiring little effort.

The user should not work with arms stretched or completely bent.


The cutting head should be close to the ground.




53_20_053

5.1.1. ADJUSTING THE ROUND HANDLE


1. Loosen the knob (3) of the round handle.

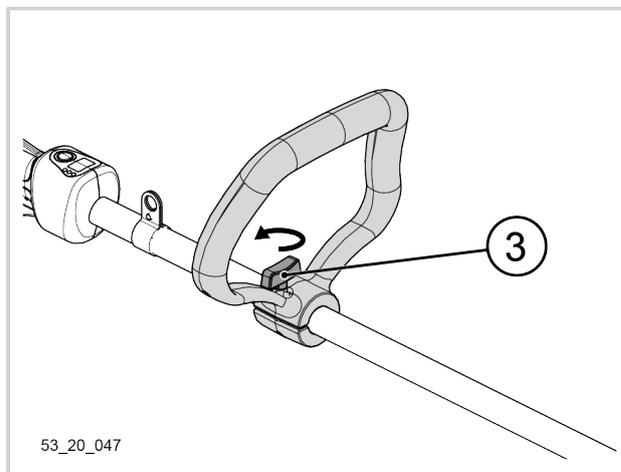

2. Position the round handle (4) along the tube (5).
3. Align the control handle.

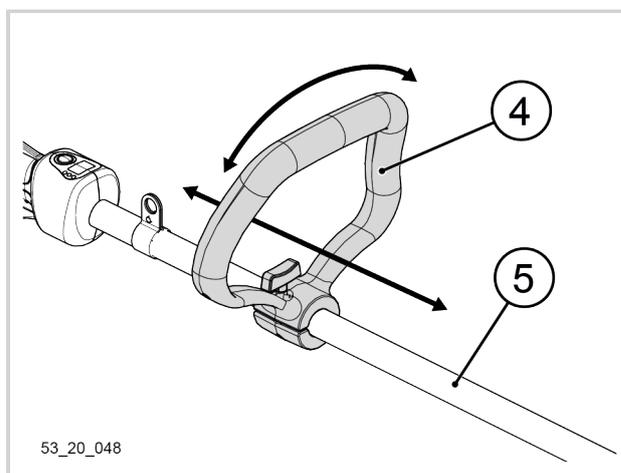

4. Tighten the knob (3) of the round handle.

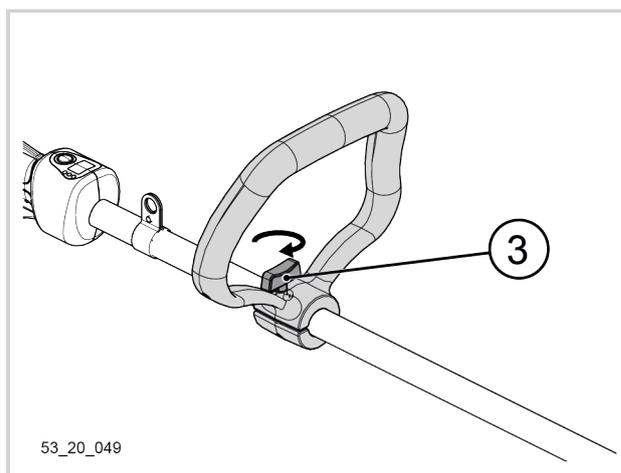

5.1.2. ADJUSTING THE CARRYING STRAP


1. Put on the carrying strap.
2. Adjust the length.




3. Pass the self-attaching fastener end of the strap under the main carrying strap.
4. Fold the self-attaching fastener over the main strap.



5. Slightly loosen the Torx screw on the carrying eyelet which is on the tool tube.
6. Position the carrying eyelet so that the tool is balanced.
7. Retighten the Torx screw.

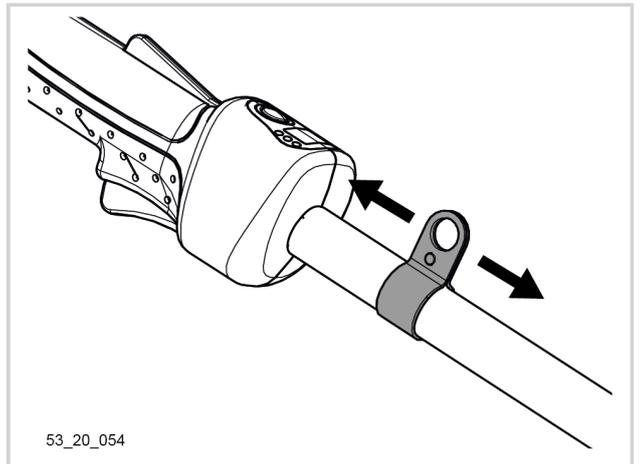

8. Attach the carrying strap to the carrying eyelet of the tool.

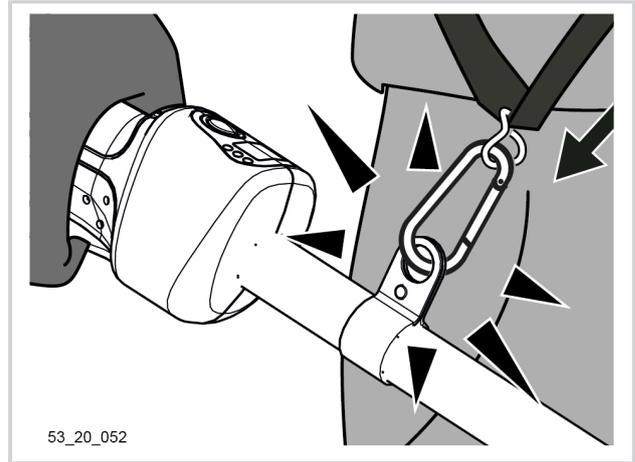

5.2. SWITCHING ON PELLENC BATTERIES

Note

For more information on PELLENC batteries see the battery instructions.

5.2.1. ALPHA 260 / 520 BATTERIES


Check that the charge level is displayed on the battery display:

The charge level is not displayed on the battery display:

- Press the battery On/Off button.

The battery should emit a beep.

Then the charge level is displayed on the battery display.

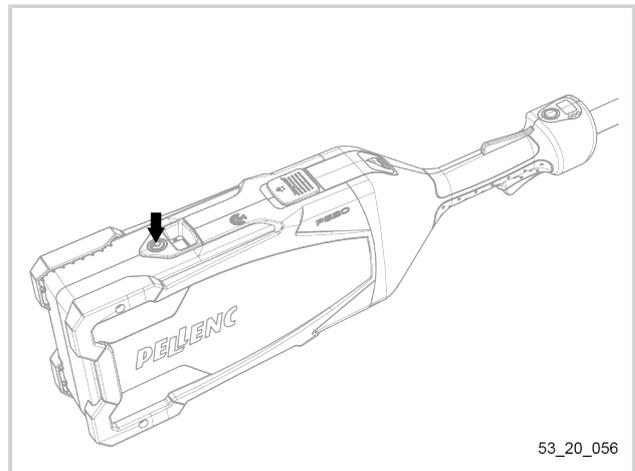

The charge level is displayed on the battery display:


Powering up can be done in 2 ways:

- Press the battery On/Off button.

The 3 "speed" LEDs should light up on the tool handle.

Then the charge level is displayed on the handle display.

The current speed LEDs light up.

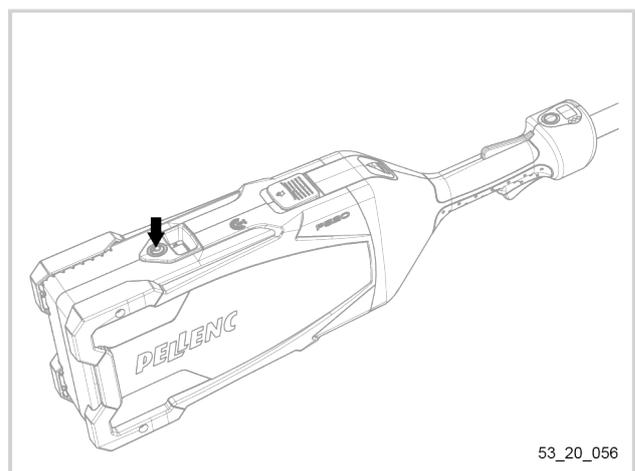

or


- Press the On / Off button on the tool handle for 1 second.

The battery should emit a beep.

The 3 "speed" LEDs should light up on the tool handle.

Then the charge level is displayed on the handle display.

The current speed LEDs light up.

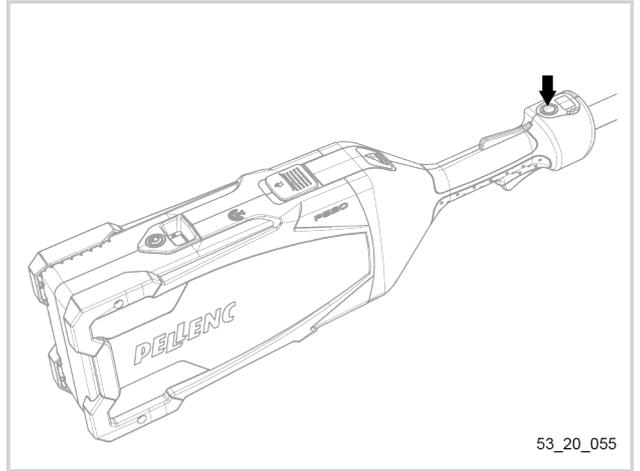


53_20_055

5.2.2. 750 / 1200 / 1500 ULIB BATTERIES

The charge level is not displayed on the battery display:

- Press one of the 2 on/off buttons on the battery.

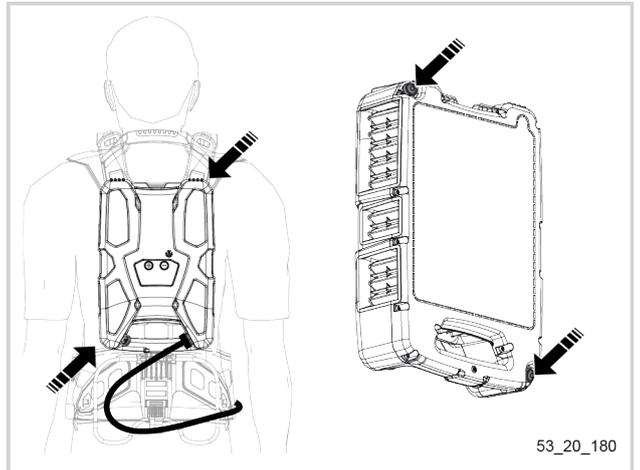


53_20_180

The charge level is displayed on the battery display:

Powering up can be done in 2 ways:

- Press one of the 2 on/off buttons on the battery.

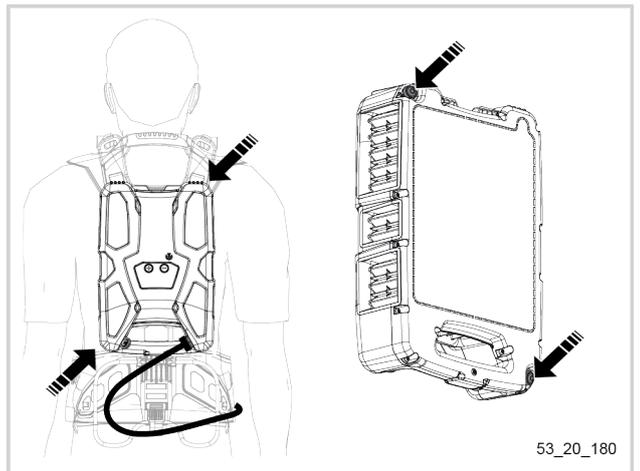

53_20_180

or


- Press the On / Off button on the tool handle for 1 second.

The battery should emit a beep.

The 3 "speed" LEDs should light up on the tool handle.

Then the charge level is displayed on the handle display.

The current speed LEDs light up.

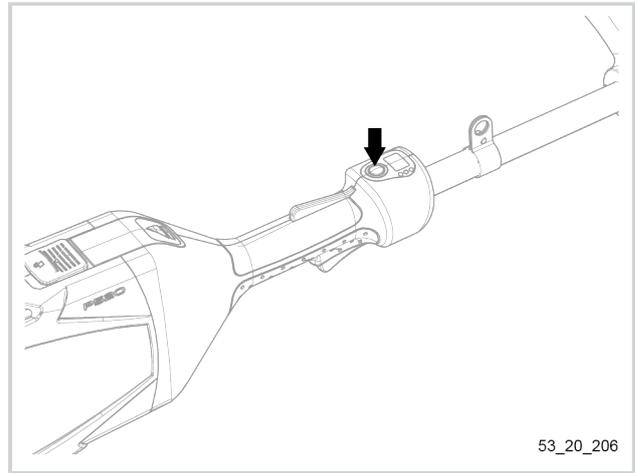


5.3. SWITCHING OFF PELLENC BATTERIES

5.3.1. ALPHA 260 / 520 BATTERIES


Powering off can be done in 2 ways:

- Press and hold the On / Off button on the tool handle for 3 seconds.
- "BY" is displayed on the handle display.

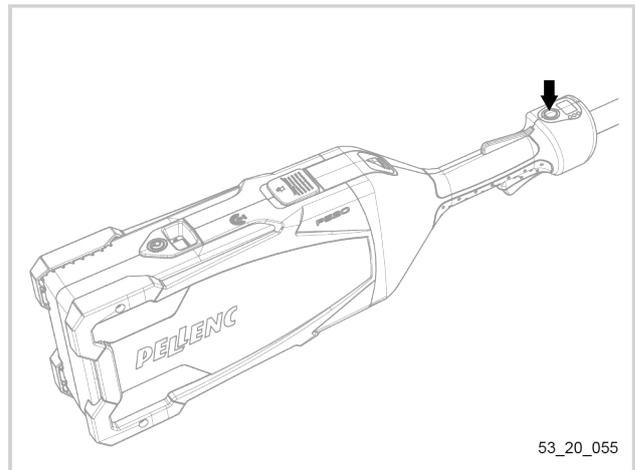

or


- Press the battery On/Off button.
- "BY" is displayed on the tool handle display.

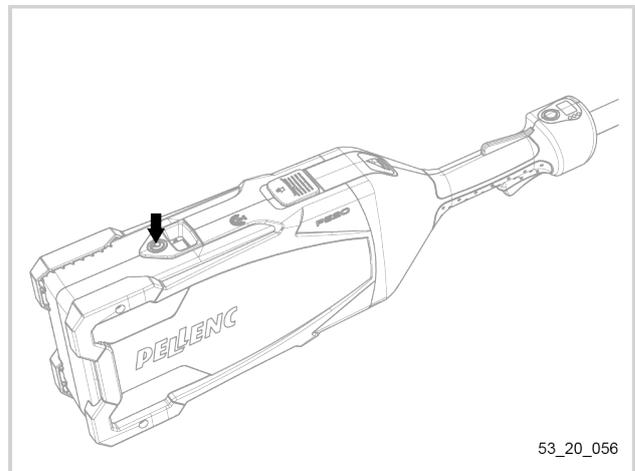

5.3.2. 750 / 1200 / 1500 ULIB BATTERIES


Powering off can be done in 2 ways:

- Press and hold the On / Off button on the tool handle for 3 seconds.
- "BY" is displayed on the handle display.

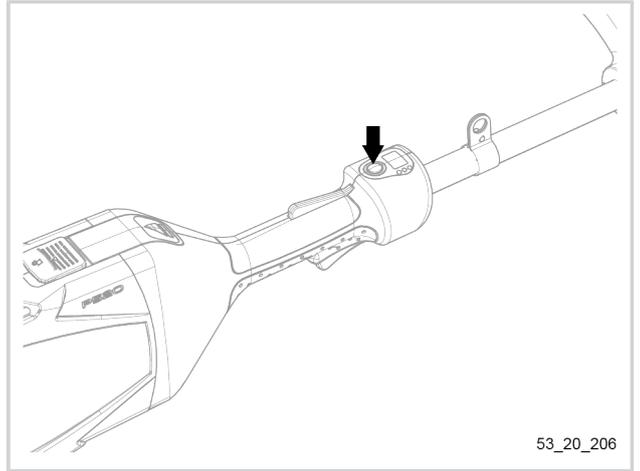

53_20_206

- Press one of the 2 on/off buttons on the battery.

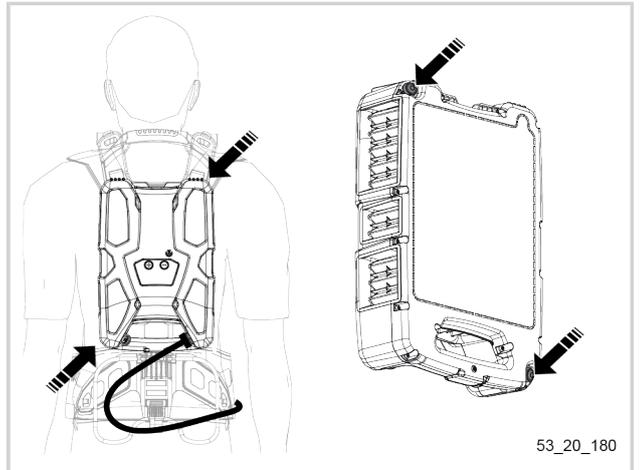

53_20_180

5.4. ADJUSTING THE CUTTING SPEED

5.4.1. CUTTING SPEED RECOMMENDATIONS

Vegetation type	Recommended rotational speed	Maximum rotational speed in rpm
Border / Lawn	Speed 1	4000
Grass	Speed 2	5800
Dense and tall grass	Speed 3	6400

Note

Reduce the speed to the minimum for greater autonomy or when the flashing message "°C" appears on the display (thermal safety shutdown near).

The tool remembers the last used speed and it will be selected by default the next time the tool is switched on.

Important

Do not cut anything other than vegetation.

5.4.2. SPEED SELECTION

Low speed: speed 1


- Press once on the tool On / Off button.
- 1 LED lights up.

Medium speed = speed 2

- Press twice on the tool On / Off button.
- 2 LEDs light up.

High speed = speed 3

- Press three times on the tool On / Off button.
- 3 LEDs light up.

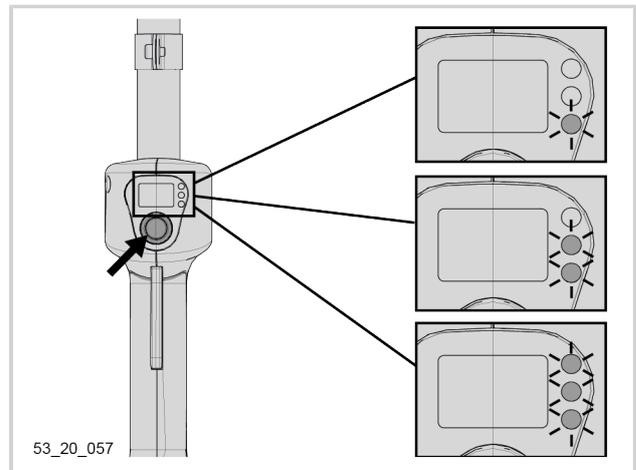

Caution

Flashing "°C" message on the handle display when the tool temperature approaches the safety shutdown temperature. Reduce the speed to a minimum or take a break.

5.5. START-UP



Caution

Check that the safety devices are running properly before starting work.

Before starting work, check that:


- The grass trimmer is securely attached to the harness.
- The tool is properly balanced on the harness.
- The harness is correctly adjusted in height.
- The cutting head is not in direct contact with the ground.
- The work area is clear.
- Nobody else is within 15 metres.
- The battery is properly connected.
- The battery charge level is displayed.
- The selected speed is correct.

Note


When the battery is connected to the tool, the information appears on the tool's handle digital display and disappears from the battery's digital display.

1. Press the safety throttle.

Keep the safety trigger pressed.

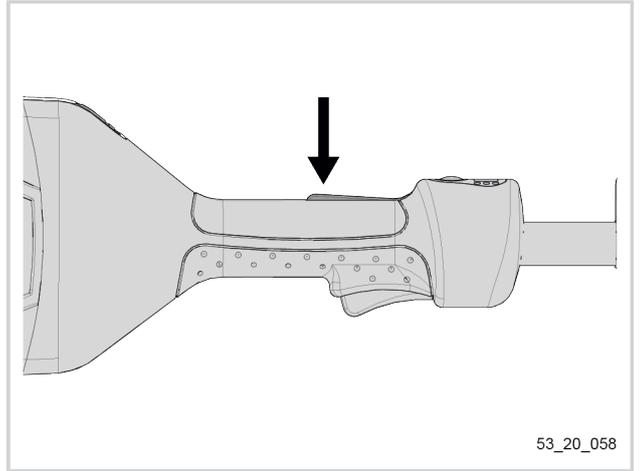

2. Press the control trigger twice to prime.

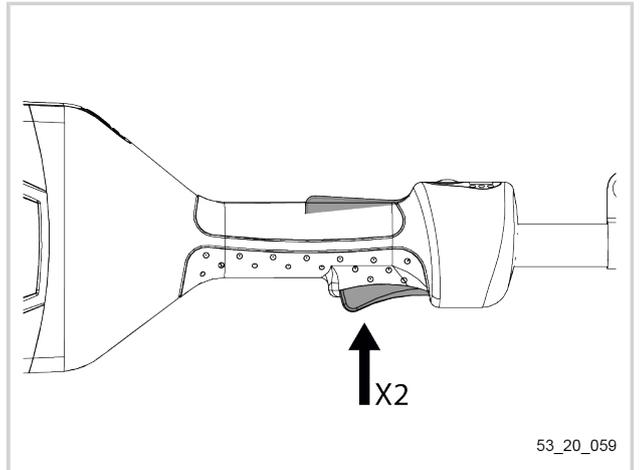


3. Keep the 2 triggers pressed for the tool to work.

The pressure exerted on the trigger allows the rotational speed of the cutting head to be gradually increased up to the maximum value selected.


Note

Repeat priming if you have released the control handle for more than 3 seconds.

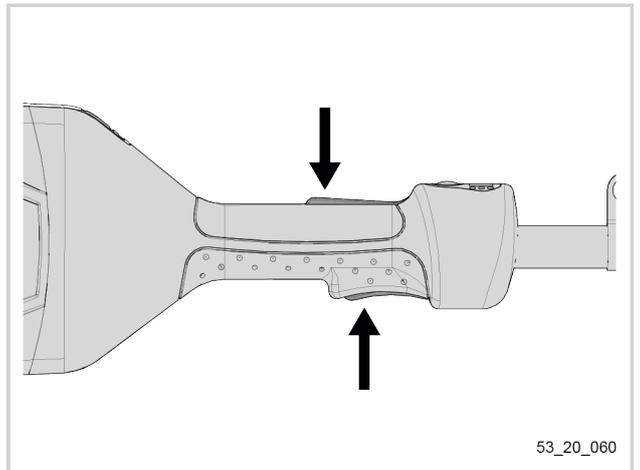

5.6. ADJUSTING THE LENGTH OF THE STRIMMER WIRE

1. Start the tool.
2. Select speed 3 by pressing the on/off button on the tool 3 times (all 3 LEDs should light up).
3. Tap the cutting head on the ground.

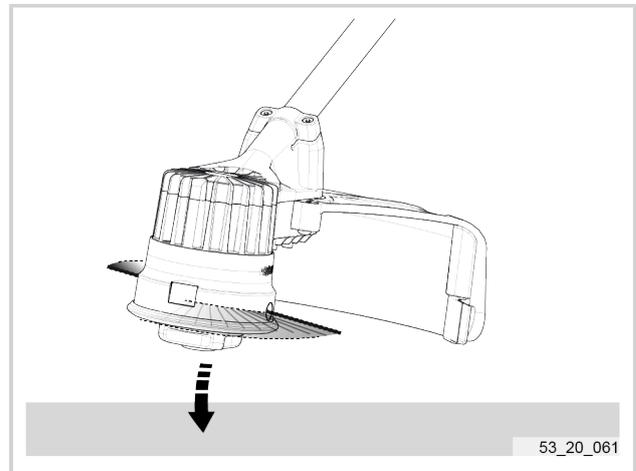


The cutting head plate in the protective guard automatically cuts the trimmer wire to the correct length.



Warning

The trimmer wire cutting plate does not cut the wire in speed 1.


Select speed 2 or 3.

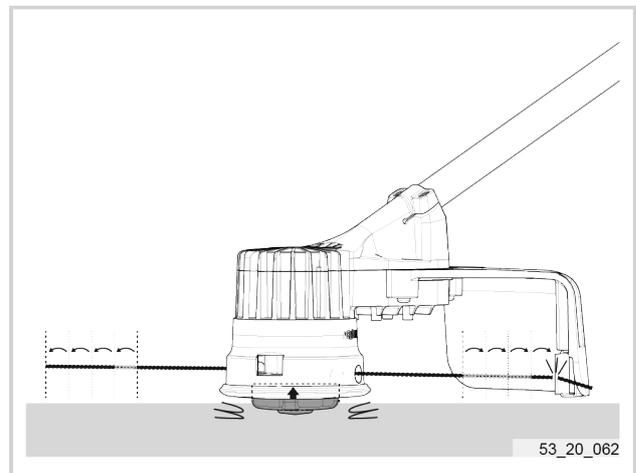

5.7. STRIMMING TECHNIQUES

5.7.1. BASIC MOWING/STRIMMING

1. Define a strip that covers the width of the work area.

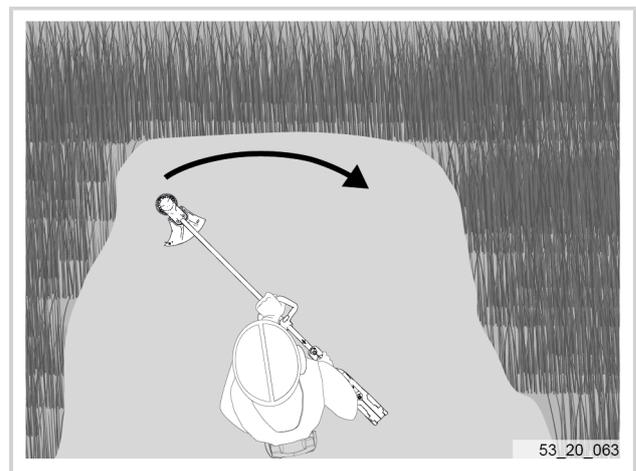


2. **Movement to be performed**

- Move the grass trimmer in half circles from left to right.
- Keep the cutting head parallel to the ground.
- Do not put the cutting head in contact with the ground.

Direction of progression

- The operator should always walk forward.

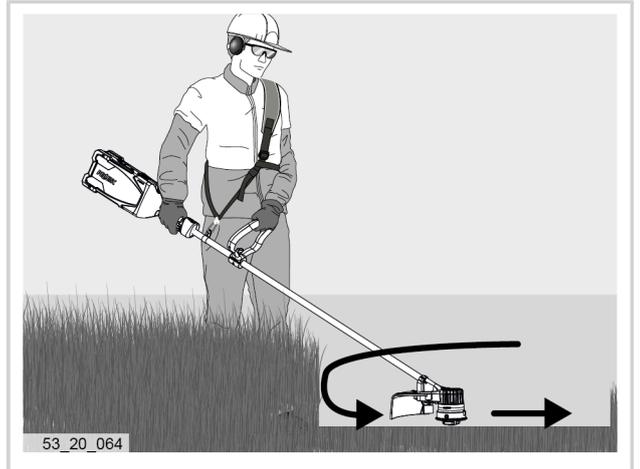

5.7.2. STRIMMING ON SLOPES


Important

Before starting to mow on a slope, make sure you are stable on the ground.

1. Position yourself at the base of the slope.
2. Define a strip parallel to the slope that spans the width of the work area.
3. **Movement to be performed**
 - Move the grass trimmer from the higher side of the slope to the lower side of the slope.
 - The cut grass will fall towards the downside.
 - This will prevent the cutting head from rotating in grass that has already been cut.
 - Do not put the cutting head in contact with the ground.

Direction of progression

- The operator must always walk forward, following the strip defined at the start of the work.
- When the strip is finished, the user goes back and starts a new strip.

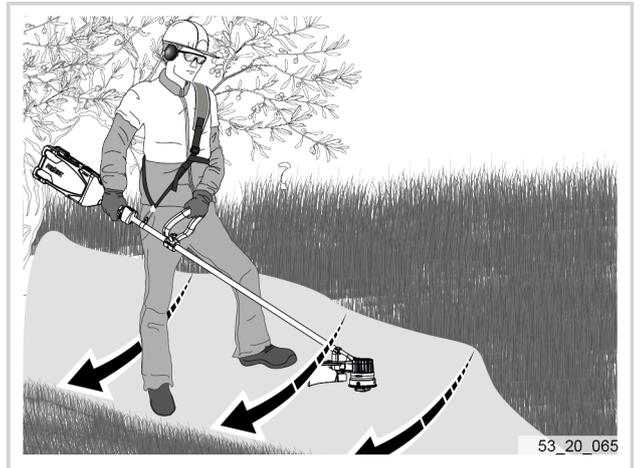


5.7.3. STRIMMING ALONG WALLS, FENCES, AROUND TREES AND FLOWER BEDS

1. Use the protective guard as a barrier between the surface to be strimmed and the vegetation to be protected.
2. **Movement to be performed**
 - Move the grass strimmer in half circles from left to right.
 - Keep the cutting head parallel to the ground.
 - Do not put the cutting head in contact with the ground.

Direction of progression

- The operator should always walk forward.

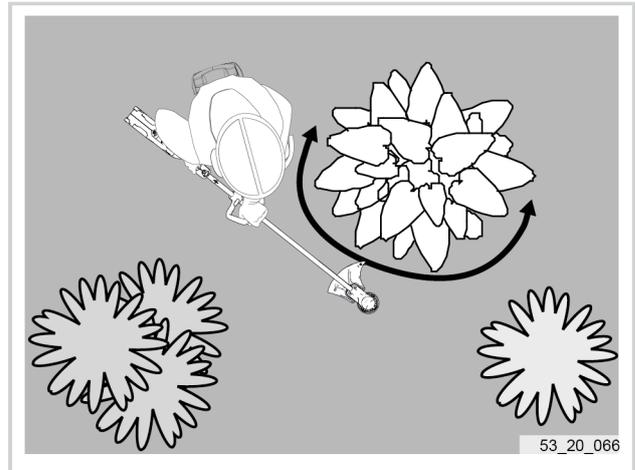

6. SERVICE

6.1. MAINTENANCE ADVICE



Caution

Always disconnect the tool battery before starting tool maintenance.

- Use products recommended by PELLENC.
- In the event of any problem, consult an authorised PELLENC distributor.

6.2. MAINTENANCE TABLE

Maintenance task	Daily	At each start-up	Every two hours	After each use	Every year or as necessary
Cleaning the tool (not with a high pressure water jet but instead by blowing or brushing)				X	
Visual check of the machine's safety devices (carrying plate, safety casing, etc.)		X		X	
Functional check of the safety throttle trigger		X			
Tightening of the cutting head at the shaft attachment (check for deformation or wear).		X	X		X
Visual inspection of the cutting tool at the shaft attachment (check for deformation or wear).		X	X		X
Check the battery level.		X			
Machine check by an approved PELLENC dealer.					X
Removing the cutting head for cleaning	X				
Battery		Please refer to the battery operating instructions			

6.3. CLEANING THE TOOL



Warning

Do not use a high pressure cleaner.

Clean with water after each use:

- The protective casing (9).

Note


If necessary remove the protective casing (see Section 4.2.2, "Remove the protective guard").

- The cutting head (8).

Note

If necessary, remove the cutting head (see Section 6.4.1, "Removing the ALPHA CUT cutting head").

- The outside of the motor crankcase (7) and the tube (5).

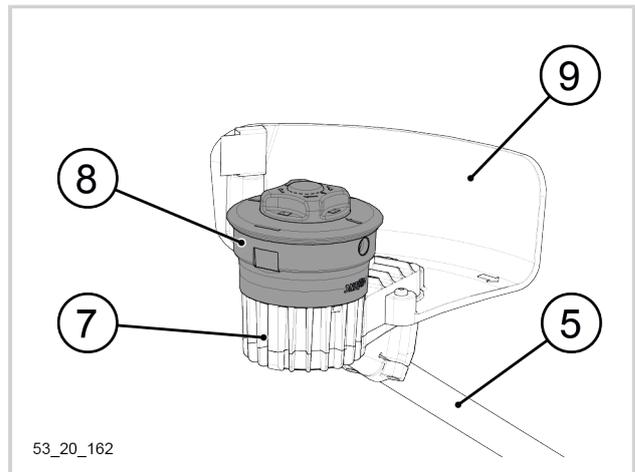

Important

After cleaning, allow the tool to dry thoroughly before using it.

6.4. REMOVING AND MOUNTING THE ALPHA CUT CUTTING HEAD




Caution


Always disconnect the battery before performing maintenance on the cutting head.

6.4.1. REMOVING THE ALPHA CUT CUTTING HEAD

1. Remove the protective casing (see Section 4.2.2, "Remove the protective guard")
2. Position the supplied Torx 25 spanner or a Torx 25 screwdriver in the slot between the cutting head (8) and the motor (21).

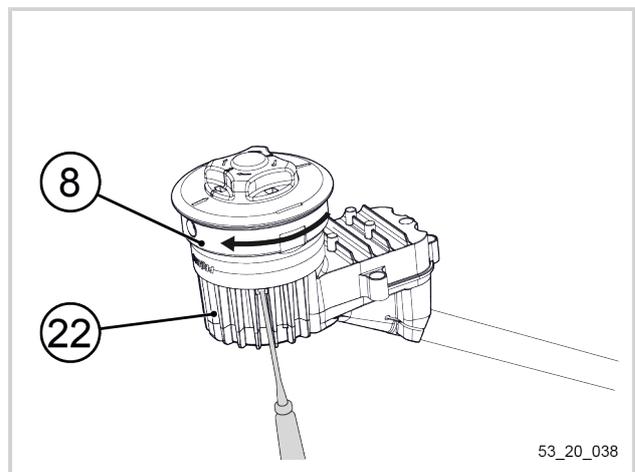


3. Turn the cutting head until you find the notch to block the rotation of the cutting head support (8).
4. Insert the supplied Torx 25 spanner or the head of a Torx 25 screwdriver into the notch of the cutting head support (25).
5. Unscrew the cutting head clockwise on the motor shaft.
6. Remove the screwdriver.

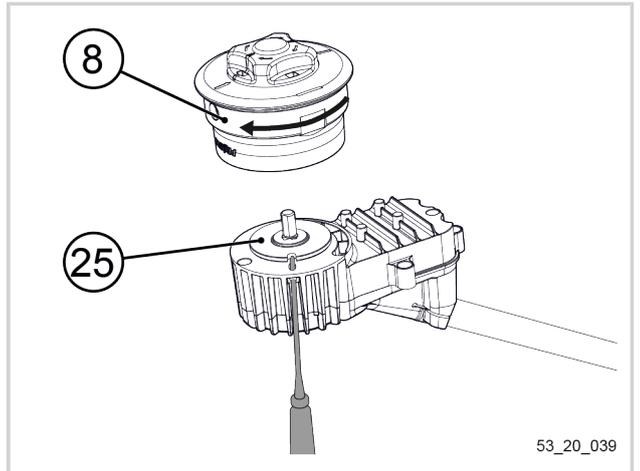

Note


If the cutting head is too tight:

1. Remove the cutting head cover (24).
2. Remove the reel (23).
3. Insert a tool through the eyelets of the cutting head (8).
4. Use the tool to provide leverage to unscrew the cutting head.

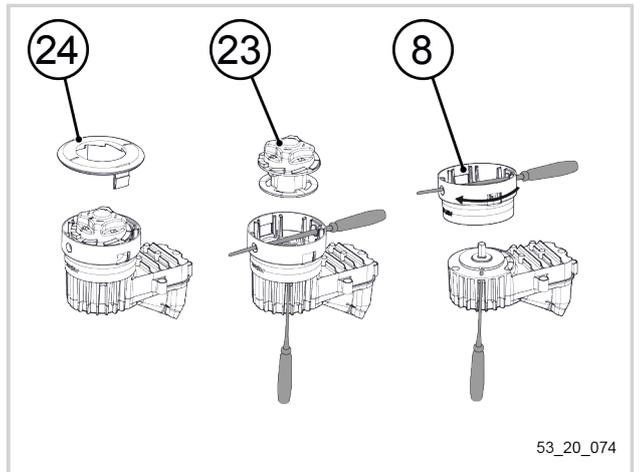


6.4.2. MOUNTING THE ALPHA CUT CUTTING HEAD

1. Check that the cutting head support (25) is on the motor.
2. Position the cutting head (8) on the motor shaft.
3. Screw the cutting head counter-clockwise onto the motor shaft.

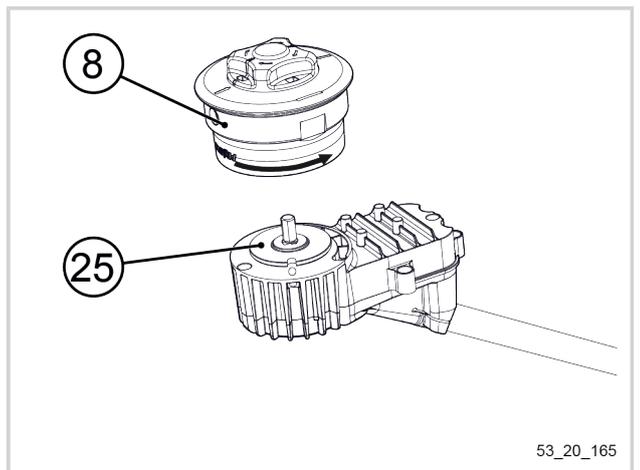

4. Position the supplied Torx 25 spanner or a Torx 20 screwdriver in the slot between the cutting head (8) and the motor (21).
5. Turn the cutting head until you find the notch to block the rotation of the cutting head support (8).
6. Insert the supplied Torx 25 spanner or the head of a screwdriver into the notch of the cutting head support (25) to lock the rotation.
7. Tighten by screwing the cutting head counterclockwise onto the motor shaft.
8. Remove the screwdriver.
9. Remount the protective casing (see Section 4.2.1, "Fitting the protective guard").

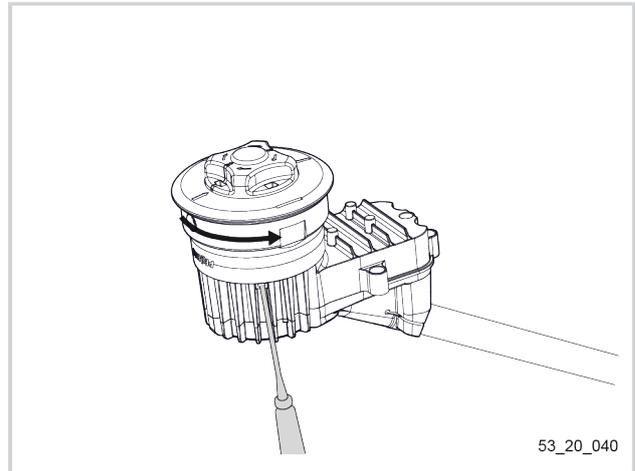

6.5. STRIMMER WIRE

6.5.1. RECOMMENDED STRIMMER WIRE DIAMETERS

Vegetation type	Ø PELLENC strimmer wire
Border / Lawn / Grass	2.4 mm
Dense and tall grass	3 mm


6.5.2. FITTING THE STRIMMER WIRE



Caution

Always disconnect the battery before performing maintenance on the cutting head.

1. Position the arrows on the wire spool (23) opposite the arrow on the TAPCUT 2 cover (24).

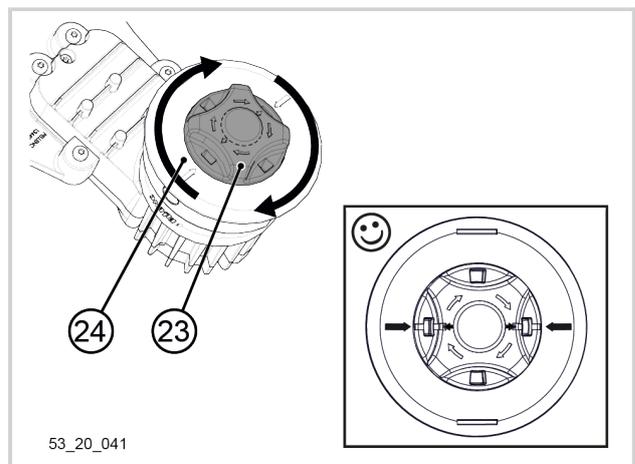

2. Preparing the strimmer wire.


Important

The maximum length of the strimmer wire should be:


- 3.5 m for Ø 2.4 mm.

The minimum length is one turn on the wire spool.

3. Pass the strimmer wire through the eyelets of the cutting head.
4. Share the strimmer wire evenly on both sides of the spool (23).

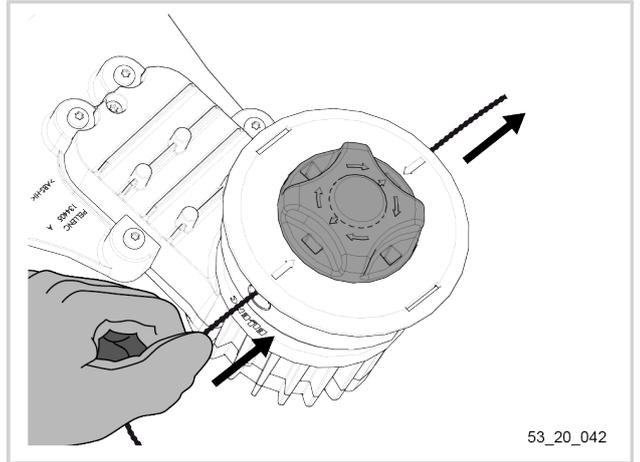

53_20_042

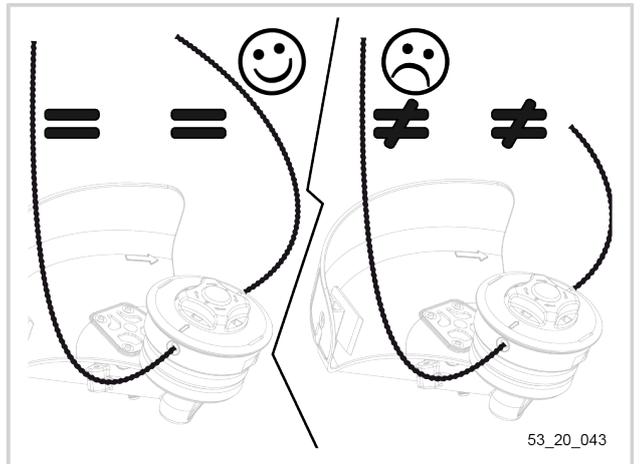


53_20_043

5. Turn the spool (23) clockwise to wind the strimmer wire.

Important

Make at least one turn to secure the strimmer wire.

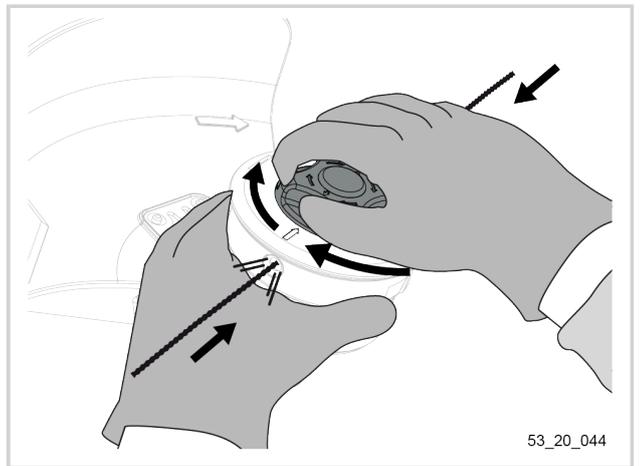

53_20_044

7. INCIDENTS AND TROUBLESHOOTING

7.1. TABLE OF INCIDENTS AND BREAKDOWNS - TROUBLESHOOTING

Incident / breakdown	LED status		Probable cause	Checks	Solutions	Repairer
	of the battery	of the tool handle				
The tool does not start	0	Off	Battery is off	Battery switch	Press the button on the battery	User
	I	Off	Battery	Check that the battery is not completely discharged	Recharge the battery	User
			Electronic circuit board	At an authorised PELLENC distributor	Change the circuit board	Pellenc authorised distributor
		On	Trigger no longer functions	At an authorised PELLENC distributor	Change the trigger or sensor	PELLENC authorised distributor
			Electronic circuit board	At an authorised PELLENC distributor	Change the circuit board	Authorised PELLENC distributor
The cutting head makes an abnormal noise or vibrates a lot	I	On	Damaged cutting head	Check there is no deformation	Change the cutting head	User Pellenc authorised distributor
			Motor shaft damaged	Check the condition of the shaft (no distortion)	Change the motor shaft	Authorised PELLENC distributor
			Strimmer wire not cut to length	Check that you are in speed 3	See Section 5.6, "Adjusting the length of the strimmer wire"	User
				Check that the wire cutting plate is fitted	Refit the strimmer wire cutter plate	User
			Strimmer wire too long	Check that the protective casing is fitted	Fit the protective casing see Section 4.2.1, "Fitting the protective guard"	User
			Strimmer wire badly wound in the cutting head	Check the winding of the strimmer wire in the cutting head.	See Section 6.5.2, "Fitting the strimmer wire"	User

Incident / breakdown	LED status		Probable cause	Checks	Solutions	Repairer
	of the battery	of the tool handle				
The tool stops during use	I	Off	Trigger no longer functions	At an authorised PELLENC distributor	Change the trigger or sensor	Authorised PELLENC distributor
			The power cord of the backpack battery is cut	Check the condition of the cord	Change the cord	Pellenc authorised distributor
			The tool has reached its temperature limit	See Section 7.3, "Thermal safety shutdown"	See Section 7.3, "Thermal safety shutdown"	User Authorised PELLENC distributor
			The battery is flat	When stopped, check the battery charge level shown in the side window	Recharge the battery (if less than 10% charged)	User
			Unintentional pressing of the tool's on/off button for more than 4 seconds.	The battery LED and digital displays are off.	Switch the tool on again.	User
The power gradually increases and "C" flashes alternately on the digital display.	I	On	The tool has reached thermal safety shutoff	See Section 7.3, "Thermal safety shutdown"	See Section 7.3, "Thermal safety shutdown"	User Authorised PELLENC distributor

7.2. SUMMARY OF DISPLAY SCREEN MESSAGES

Note

Error messages appear on the digital display on the tool handle.

Diagnostics display codes	Name
E1	Abnormal current
E2	Battery communication fault
E4	Tool temperature too high
E5	HMI board communication error
E9	Sensor fault

Important

Ⓒ Never attempt to dismantle the tool, under penalty of cancellation of the warranty. Contact your authorised repair person.

7.3. THERMAL SAFETY SHUTDOWN

Important

To protect the tool, when used intensively for a long period of time, a maximum power is limited when the temperature of the tool is too high.

When the tool temperature rises too high, check that:

1. The motor protective casing is clean.
2. The length and diameter of the strimmer wire are suitable.
3. The vegetation is adapted to the tool (check the type of vegetation, the height of the vegetation, etc.).

When the temperature of the tool has reached 85°C:



- "C°" flashes alternately with the battery life on the digital display of the handle.
- The power gradually decreases and is then limited.

When the temperature of the tool drops below 80°C:

- The power gradually increases until it reaches the level you selected.

When the tool continues to heat up:

1. The error message "E4" appears on the handle display of the tool.
2. The battery emits 1 long beep.
3. The battery emits 4 short beeps.
4. The battery and the tool switch off.

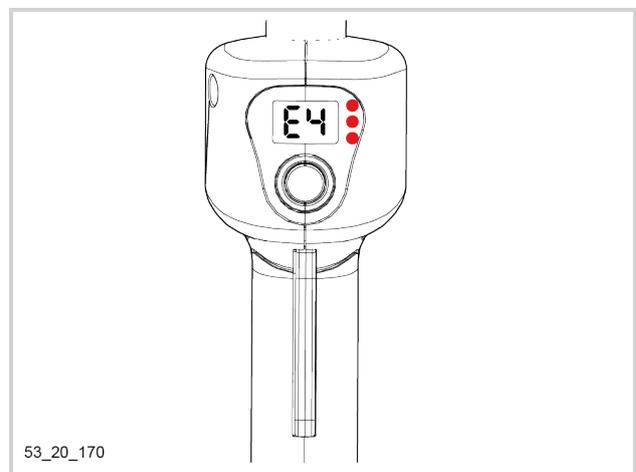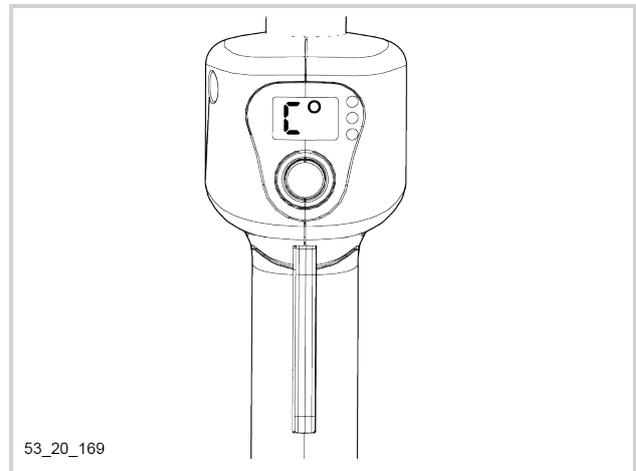

Important

If the problem persists, contact an authorised Pellenc dealer.

8. STORAGE AND TRANSPORT

8.1. STORAGE

- Switch off the tool (see Section 5.3, “ Switching off PELLENC batteries”).
- Disconnect the battery (see Section 4.5, “Disconnecting PELLENC batteries”).
- Store the battery (refer to the battery operating instructions).
- Clean the tool (see Section 6.3, “Cleaning the tool”).
- To store the tool in its packaging, perform the disassembly steps in Section 4, “Commissioning”.
- Store the tool in a dry place out of children's reach.

8.2. TRANSPORT

- Switch off the tool (see Section 5.3, “ Switching off PELLENC batteries”).
- Disconnect the battery (see Section 4.5, “Disconnecting PELLENC batteries”).
- Ensure that the tool and the battery are secured in the transport vehicle.

9. ACCESSORIES AND CONSUMABLES


9.1. ACCESSORIES INCLUDED

Name	reference	
Carrying strap	133937	 <small>53_20_068</small>
Carrying eyelet + bolt	134822	 <small>54N_19_083</small>
Cutting head: ALPHA CUT	57188	 <small>53_20_075</small>


9.2. OPTIONAL ACCESSORIES

Name	reference	
PELENC ALPHA 260 battery	57192	
PELENC ALPHA 520 battery	57193	

53_20_071

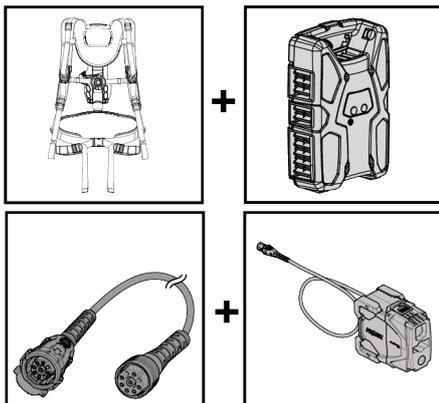Name	reference	
Comfort harness	57183	
1200 Ultra Lithium battery	57253	
1500 Ultra Lithium battery	57254	
Counterweight	57195	
Extension cord	57238	

53_20_072

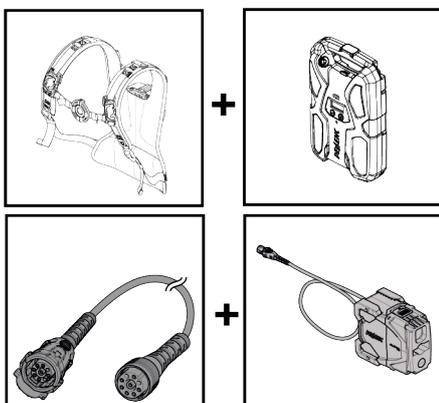Name	reference	
750 ULiB battery harness	57257	
750 Ultra Lithium battery	57191	
Counterweight	57195	
Extension cord	57238	

53_20_076

9.3. CONSUMABLES

Name	Diameter	Length +/- 1%	reference	
Strimmer wire spool	Ø 2.4 mm	347 m	79599	
Strimmer wire pack	Ø 2.4 mm	70 m	79601	
Strimmer wire spool	Ø 3 mm	280 m	117453	
Strimmer wire pack	Ø 3 mm	56 m	108911	

53_20_067

10. WARRANTIES

10.1. GENERAL WARRANTIES

10.1.1. STATUTORY WARRANTY

- 10.1.1.1. LATENT DEFECTS WARRANTY

Apart from the commercial warranty provided for under Article II, Article 1641 of the Civil Code provides that "the seller is bound to a warranty on account of latent defects of the object sold which render it unfit for the use for which it was intended, or which would impair said use to the extent that the buyer would not have acquired it, or would only have given a lesser price for it, had he known of them".

Article 1648 of the Civil Code "The action resulting from latent defects must be brought by the purchaser within two years after the discovery of the defect. "

- 10.1.1.2. LEGAL WARRANTY OF CONFORMITY

Article L.217-4 of the French Consumer Code "The seller delivers goods in conformity with the contract and is liable for defects of conformity existing upon delivery".

The seller is also liable for any lack of compliance resulting from the packaging, assembly or installation instructions whenever its contractual liability is engaged in this regard or the latter are carried out under its responsibility

Article L.217-5 of the French Consumer Code "Goods are compliant with the contract":

1. Where they are fit for the purpose normally expected of similar goods and, where applicable:
 - If it matches the description given by the seller and possesses the qualities that were presented to the purchaser in the form of a sample or model;
 - If it possesses the qualities that a purchaser can reasonably expect given the public statements made by the seller, the producer or its representative, especially in advertising or labelling;

2. Or, if it has the characteristics defined by mutual agreement of the parties or is fit for any particular purpose that the buyer made known to the seller and that the latter accepted.

Article L.217-12 of the Consumer Code "legal action resulting from lack of conformity lapses two years after delivery of the goods".

10.1.2. COMMERCIAL WARRANTYPELENC

- 10.1.2.1. CONTENT

10.1.2.1.1. GENERAL INFORMATION

In addition to legal warranties, client users benefit from the commercial warranty on products PELENC covering the exchange and replacement of parts recognised as being out of order, due to machining defects, assembly defects or material defects, whatever the cause.

The warranty is fully integral to the product sold by PELENC.

10.1.2.1.2. SPARE PARTS

The commercial warranty also covers original PELENC spare parts, excluding labour and to the exclusion of certain parts of each product provided at delivery.

- 10.1.2.2. DURATION OF THE WARRANTY

10.1.2.2.1. GENERAL INFORMATION

PELENC Products are guaranteed under the commercial warranty as from delivery to the customer for a period of two (2) years for products connected to a PELENC battery, and for a period of one (1) year for other PELENC products.

10.1.2.2.2. SPARE PARTS

PELENC Replacement parts replaced under the product warranty are guaranteed under the commercial warranty as from delivery of the PELENC product to the customer user for a period of two (2) years for products connected to a PELENC battery, and for a period of one (1) year for other PELENC products.

In the case of products connected to a PELENC battery, parts that are replaced under the product warranty after the 12th month of use, are covered for a period of one (1) year.

10.1.2.2.3. WARRANTY EXCLUSIONS

Excluded from the commercial warranty are products that have been subject to abnormal use, or were used under conditions and for purposes other than those for which they were manufactured, especially in the case of non-compliance with conditions stipulated in this operating instructions manual.

It does not apply in case of shock, fall, neglect, lack of supervision or maintenance or in case of transformation of the product. Also excluded from the warranty are products that have been subject to tampering, alteration or modification by the customer user.

Wear parts and/or consumables cannot be covered by the warranty.

- 10.1.2.3. IMPLEMENTATION OF THE COMMERCIAL WARRANTY**10.1.2.3.1. PRODUCT COMMISSIONING AND COMMISSIONING DECLARATION**

The DISTRIBUTOR undertakes to complete the computer commissioning declaration form, no later than eight days after the delivery of the property to the user customer, in order to activate the latter on the www.pellenc.com website under "warranties and training" in the "extranet" menu, using the identifier previously provided to them by PELLENC.

Failing that, commissioning declaration will not be effective and implementation of the commercial warranty PELLENC will not occur. As a consequence thereof, the DISTRIBUTOR must ensure the financial burden of its intervention under the warranty without being able to pass on the cost to the client user.

The DISTRIBUTOR shall also undertake to complete the warranty card or the certificate of warranty and commissioning for self-propelled equipment provided with the product after having the client user sign and date it.

10.1.3. PAID AFTER-SALES SERVICE**- 10.1.3.1. GENERAL INFORMATION**

Malfunctions, breakdowns, breakages resulting from misuse, neglect or improper maintenance by the client user as well as malfunctions resulting from normal wear of the product are subject to the payment of after-sales service, even during the period of the legal and commercial warranty. After-sales service repairs that fall outside of the legal and commercial warranty also include maintenance, adjustments, diagnostics of all types, and cleaning without the present list being exhaustive.

- 10.1.3.2. WEAR PARTS AND CONSUMABLES

Wear parts and consumables also fall within the after-sales service.

- 10.1.3.3. SPARE PARTS

Paid after-sales service also covers original PELLENC spare parts, excluding labour and outside the legal and commercial warranty period.

In case of replacement of original PELLENC spare parts in the context of after-sales service, said latter are covered by a warranty of one year as from the installation date.

11. COMPLIANCE STATEMENTS

11.1. "EC" DECLARATION OF CONFORMITY: EXCELION ALPHA

MANUFACTURER/ENTITY AUTHORISED TO COMPILE THE TECHNICAL FILE	PELLENC
ADDRESS	Quartier Notre-Dame - 84120 Pertuis (France)

We hereby declare that the machine referred to below as:

GENERIC DENOMINATION	GRASS STRIMMER
FUNCTION	BATTERY-POWERED GRASS STRIMMER FOR GREEN SPACES MAINTENANCE
COMMERCIAL NAME	EXCELION ALPHA
TYPE	EXCELION ALPHA
MODEL	EXCELION ALPHA
SERIAL NO.	53U00001 - 53U49999 53V00001 - 53V49999 53W00001 - 53W49999

Complies with the relevant provisions of the Machinery Directive 2006/42/EC.

Complies with the provisions of the following European directives:

- 2014/30/EU EMC Directive; 2011/65/EU ROHS Directive; 1907/2006 REACH Regulation; 2012/19/EU WEEE Directive

The following harmonised European standards have been used in part or in full:

- EN 60335-1:2012 + A11:2014+A13:2017+A1:2019+A14:2019+A2:2019 ; EN 50636-2-91:2014 ; EN ISO 11806-1:2011 ; EN 60529 :1991 + A2: 2013 + AC: 2019; EN 55014-1: 2017; EN 55014-2: 2015

Sound power level:


- Measured sound power level L_{WAm} : 92 dB(A)
- Guaranteed sound power level L_{WAg} : 94 dB (A)

The measured sound level and the guaranteed sound power level were measured by the notified body LNE, 29 avenue Roger Hennequin 78190 Trappes, France, according to a procedure in accordance with Directive 2000/14/EC Annex VI. The reported result is identified by the following number: 2000-14/P181012/1.

SIGNED IN PERTUIS, DATED 19/08/2021

JEAN-MARC GIALIS

Chief Executive Officer

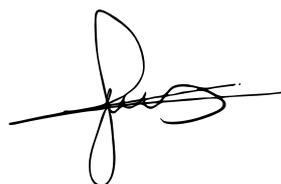

11.2. UK DECLARATION OF CONFORMITY ^{UK}CA : EXCELION ALPHA

MANUFACTURER / ENTITY AUTHORIZED TO COMPILE THE TECHNICAL FILE	PELENC
ADDRESS	Quartier Notre-Dame - 84120 Pertuis (France)

We hereby declare that the machine referred to below as:

GENERIC DENOMINATION	BRUSH CUTTER		
FUNCTION	MAINTENANCE OF GREEN SPACES		
COMMERCIAL NAME	EXCELION ALPHA		
TYPE	EXCELION ALPHA		
MODEL	EXCELION ALPHA		
SERIAL No.	53U00001 - 53U49999	53V00001 - 53V49999	53W00001 - 53W49999

Complies with the relevant provisions of the Supply of Machinery (Safety) Regulations 2008

Complies with the following other directives and / or relevant provisions :

- Electromagnetic Compatibility Regulations 2016 ; The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 ; 1907/2006 REACH Regulations ; The Waste Electrical and Electronic Equipment Regulations 2013

The following harmonised european standards were used:


- BS EN 62841-1 : 2016 ; BS EN 62841-4-2 : 2017 ; BS EN 60529:1992+A2:2013 ; BS EN 55014-1 : 2017 ; BS EN 55014-2 : 2015

Sound Power Level :

- Measured sound power level L_{WAm} : 92 dB (A)
- Guaranteed sound power level L_{WAq} : 94 dB (A)

The measured sound level and the guaranteed sound power level were measured by the notified body LNE, 29 avenue Roger Hennequin 78190 Trappes, France according to a procedure compliant with Directive 2000/14/EC Annex VI. The report is identified by the following number : 2000-14/P181012/1.

SIGNED IN PERTUIS, DATED 19/08/2021
JEAN-MARC GIALIS
CEO

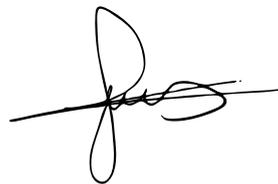

PELLENC

   www.pellenc.com

PELLENC
Quartier Notre Dame - 84120 Pertuis (France)

