

ENG

Translate of the
original manual



CHAINSAW SELION M12

Operating instructions

51_149238-C
06/2021

READ THE USER GUIDE CAREFULLY BEFORE USE



www.pellenc.com

PELLENC

TABLE OF CONTENTS

1. INTRODUCTION	6
2. SAFETY	7
2.1. INTENDED USAGE	7
2.2. GENERAL SAFETY WARNINGS FOR THE TOOL	7
2.2.1. WORK AREA SAFETY	7
2.2.2. ELECTRICAL SAFETY	7
2.2.3. PERSONAL SAFETY	8
2.2.4. POWER TOOL USE AND CARE	8
2.2.5. BATTERY TOOL USE AND CARE	8
2.2.6. SERVICE	9
2.2.7. TOOL'S END OF LIFE MANAGEMENT	9
2.3. CHAIN SAW SAFETY WARNINGS	9
2.4. CAUSES AND OPERATOR PREVENTION OF KICKBACK	9
2.5. SAFETY MEASURES RELATED TO THE USE OF THE PELLENC BATTERY AND CHARG- ER	10
2.6. PERSONAL PROTECTION EQUIPMENT	10
2.7. SAFETY SIGNAGE	11
2.8. RESIDUAL RISKS	11
3. DESCRIPTION AND TECHNICAL CHARACTERISTICS	12
3.1. DESCRIPTION	12
3.2. TECHNICAL FEATURES	13
3.2.1. GENERAL CHARACTERISTICS	13
3.2.2. CHAINS AND CHAIN GUIDES COMPATIBILITY	13
3.2.3. CHARGERS AND BATTERIES COMPATIBILITY	13
3.2.4. NOISE LEVELS	13
3.2.5. VIBRATION LEVELS	14
4. COMMISSIONING	15
4.1. CONTENTS OF THE KIT	15
4.2. USEFUL TIPS FOR COMMISSIONING	15
4.3. ASSEMBLY OF THE CHAIN AND CHAIN GUIDE (1ST USE)	15
4.3.1. CHAIN GUIDE FUNCTIONS	16
4.4. AUTOMATIC CHAIN TENSIONING (FIRST USE)	17
4.5. CHAIN LUBRICATION (FIRST USE)	19
4.5.1. FILLING THE CHAIN OIL RESERVOIR	19
4.5.2. FIRST FORCED LUBRICATION CYCLE	19
4.6. RUNNING-IN (BEFORE FIRST USE)	20
4.7. CHAIN PROTECTION	20
4.8. FITTING THE BATTERY ON THE HARNESS	21
4.9. CONNECTING PELLENC BATTERIES TO THE TOOL	21
4.9.1. ULIB 250 BATTERY	21
4.9.2. ULIB 750 / ALPHA 260 / ALPHA 520 BATTERIES	21

4.9.3. ULIB 700 / OLIVION+ BATTERY	22
4.10. DISCONNECTING PELLENC BATTERIES FROM THE TOOL	22
4.10.1. ULIB 250 BATTERY	23
4.10.2. ULIB 750 / ALPHA 260 / ALPHA 520 BATTERIES	23
4.10.3. ULIB 700 / OLIVION+ BATTERY	23
5. USAGE	24
5.1. USAGE SITUATION	24
5.2. ADJUSTING THE HARNESS	24
5.3. SWITCHING THE BATTERY ON AND OFF	24
5.3.1. ULIB 250 BATTERY	24
5.3.2. ULIB 750 BATTERY	25
5.3.3. ALPHA 260 / ALPHA 520 BATTERY	25
5.3.4. ULIB 700 / OLIVION+ BATTERY	25
5.4. HOLDING THE TOOL	26
5.5. START-UP	26
5.6. ELECTRONIC	27
5.6.1. CHECKING THE CHAIN BRAKE	27
6. SERVICE	28
6.1. MAINTENANCE ADVICE	28
6.2. THE FOUR BASIC RULES	28
6.3. MAINTENANCE FREQUENCY	29
6.4. REPLACING THE CHAIN AND THE CHAIN GUIDE	30
6.5. AUTOMATIC CHAIN TENSIONING	32
6.6. CHAIN LUBRICATION	34
6.6.1. FILLING THE CHAIN OIL RESERVOIR	34
6.6.2. FIRST FORCED LUBRICATION CYCLE	34
6.7. SHARPENING THE CHAIN	35
6.8. ADJUSTING THE DEPTH LIMITERS	36
6.9. CHECKING AND REPLACING THE SPROCKET	38
6.10. CLEANING THE CHAIN GUIDE	38
6.11. GREASING THE ANTI-KICKBACK CHAIN GUIDE	39
6.12. CLEANING THE TOOL	39
6.13. FILLING THE CHAIN OIL RESERVOIR	39
7. INCIDENTS AND TROUBLESHOOTING	40
8. STORAGE AND TRANSPORT	41
8.1. CHAIN PROTECTION	41
8.2. OFF-SEASON STORAGE	41
9. ACCESSORIES AND CONSUMABLES	42
9.1. ACCESSORIES	42
9.2. OPTIONAL ACCESSORIES	42
9.3. CONSUMABLES	43
10. WARRANTIES	44

10.1. GENERAL WARRANTIES	44
10.1.1. STATUTORY WARRANTY	44
10.1.2. COMMERCIAL WARRANTYPELLENC	44
10.1.3. PAID AFTER-SALES SERVICE	45
11. COMPLIANCE STATEMENTS	47
11.1. "EC" DECLARATION OF CONFORMITY: SELION M	47

1. INTRODUCTION

Dear Customer,

Thank you for purchasing your Chainsaw Selion M12. Correctly used and maintained, this tool will give a satisfactory performance for many years.

Warning



Your device contains numerous recoverable or recyclable materials. Return it to your dealer or, failing this, to an approved servicing centre to be treated.



Comply with the regulations in force in your country as concerns environmental protection associated with your activity.



Warning

It is imperative that you read through the ENTIRE user's manual before using or servicing the tool. Always comply with the instructions and illustrations in the manual.


All through this user guide you will find advisory notes and information entitled: NOTE, IMPORTANT, ATTENTION and WARNING.

The points marked "NOTE" indicate additional information.

The points marked "IMPORTANT" warn the user of a potential risk to the equipment.

The points marked "ATTENTION" warn the user of a potentially hazardous situation which if not avoided leads to minor injuries.

The points marked "WARNING" warn the user of a potentially hazardous situation which if not avoided leads to serious injury or death.

The warning  indicates that damage resulting from failure to comply with the procedures and instructions is not covered by the warranty and the owner will be liable for any repair costs.

Safety indications are also given on the tool; they remind you of the safety precautions to be taken. Identify and read these indications before using the tool. Immediately replace any indications that may become partially illegible or deteriorated.

Refer to Section 2.7, "Safety signage" for the location diagram of the safety stickers affixed to the tool.

No part of this manual may be reproduced without the written permission of the company PELLENC. The illustrations given in this manual are for information purposes and are in no way contractual. The PELLENC company reserves the right to make any modification or improvement to its products as deemed necessary without informing customers already in possession of a similar model. This manual forms an integral part of the tool and must accompany the tool if it changes hands.

2. SAFETY

2.1. INTENDED USAGE

- The Chainsaw Selion M12 is intended for cutting only wood and branches up to a diameter corresponding to the length of the chain guide.
- The Chainsaw Selion M12 must be used at ground level or from a suitable platform that is completely stable and secure.
- When is use the Chainsaw Selion M12 should be held in both hands, right hand on the trigger handle and left hand on the top handle.
- The Chainsaw Selion M12 is intended for outdoor use only.
- The Chainsaw Selion M12 is not intended for any other use.
- Mounting of parts on the Chainsaw Selion M12 is authorized only for original or manufacturer-approved spare parts (chain guides or saw chains for example) as well as for authorized chain guide / saw chain combinations as indicated in the manual.
- The user is responsible for any accident resulting from improper use or unauthorized modification of the Chainsaw Selion M12.

2.2. GENERAL SAFETY WARNINGS FOR THE TOOL



Warning

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Note

Save all warnings and instructions for future reference.

The term "power tool" in the safety warnings refers to your battery-powered electric tool (without power cord).

2.2.1. WORK AREA SAFETY

1. **Keep the work area clean and well lit.** Cluttered or dark areas invite accidents.
2. **Do not operate power tools in an explosive atmosphere, for example in the presence of flammable liquids, gases or dust.** Power tools create sparks, which may ignite the dust or fumes.
3. **Keep children and bystanders away while operating the power tool.** Distractions can cause you to lose control of the tool.

2.2.2. ELECTRICAL SAFETY

1. **The power tool connector must be adapted to the socket. Never modify the connector in any way whatsoever. Do not use adapter plugs with earthed (grounded) power tools.** Unmodified plugs and suitable sockets reduce the risk of electric shock.
2. **Avoid contact with earthed surfaces such as pipes, radiators, cookers, and refrigerators.** There is an increased risk of electric shock if your body is in direct contact with the ground.
3. **Do not expose power tools to rain or damp conditions.** The entry of water into a power tool increases the risk of electric shock.
4. **Do not mishandle the power cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges and moving parts.** Damaged or entangled cords increase the risk of electric shock.

5. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
6. **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

2.2.3. PERSONAL SAFETY

1. **Stay alert, watch what you are doing, and use common sense when operating the power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention when using a power tool can result in serious personal injury.
2. **Use personal protective equipment. Always wear eye protection.** Safety equipment such as dust masks, non-slip safety shoes, helmets, or ear protection used at the appropriate times reduces injuries.
3. **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
4. **Remove any adjusting wrench before switching the electric tool on.** A wrench left attached to a rotating part can cause injury.
5. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
6. **Dress appropriately. Do not wear loose clothing or jewellery. Keep hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can get caught in moving parts.
7. **If devices are provided for connecting dust extraction and collection equipment, ensure that these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

2.2.4. POWER TOOL USE AND CARE

1. **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
2. **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
3. **Unplug the tool from the socket or remove the battery (if possible) before any adjustment, change of accessory or storage.** These preventive safety measures reduce the risk of accidentally starting the power tool.
4. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
5. **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
6. **Keep the cutting elements sharp and clean.** Properly maintained cutting tools with sharp cutting elements are less likely to jam and are easier to control.
7. **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

2.2.5. BATTERY TOOL USE AND CARE

1. **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
2. **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
3. **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
4. **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, wash away with water. If liquid contacts eyes, seek additional medical help.** Liquid ejected from the battery may cause irritation or burns.

2.2.6. SERVICE

1. **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

2.2.7. TOOL'S END OF LIFE MANAGEMENT

1. **When the tool reaches the end of its life, PELLENC keeps the end of life sheet of the equipment at disposal.** The end of life sheet provides instructions for safely removing components.

2.3. CHAIN SAW SAFETY WARNINGS

1. **Keep all parts of the body away from the saw chain when the chain saw is operating. Before you start the chain saw, make sure the saw chain is not contacting anything.** A moment of inattention while operating chain saws may cause entanglement of your clothing or body with the saw chain.
2. **Always hold the chain saw with your right hand on the rear handle and your left hand on the front handle.** Holding the chain saw with a reversed hand configuration increases the risk of personal injury and should never be done.
3. **Hold the power tool by insulated gripping surfaces only, because the saw chain may contact hidden wiring.** Saw-chains coming into contact with a "live" wire can result in the electrification of the exposed metal parts of the electric tool and cause electric shock to the operator.
4. **Wear safety glasses and hearing protection. Further protective equipment for head, hands, legs and feet is recommended.** Adequate protective clothing will reduce personal injury by flying debris or accidental contact with the saw chain.
5. **Do not operate a chain saw in a tree.** Operation of a chain saw while up in a tree may result in personal injury.
6. **Always keep proper footing and operate the chain saw only when standing on fixed, secure and level surface.** Slippery or unstable surfaces such as ladders may cause a loss of balance or control of the chain saw.
7. **When cutting a limb that is under tension be alert for spring back.** When the tension in the wood fibres is released the spring loaded limb may strike the operator and/or throw the chain saw out of control.
8. **Use extreme caution when cutting brush and saplings.** The slender material may catch the saw chain and be whipped toward you or pull you off balance.
9. **Carry the chain saw by the front handle with the chain saw switched off and away from your body. When transporting or storing the chain saw always fit the guide bar cover.** Proper handling of the chain saw will reduce the likelihood of accidental contact with the moving saw chain.
10. **Follow instructions for lubricating, chain tensioning and changing accessories.** Improperly tensioned or lubricated chain may either break or increase the chance for kickback.
11. **Keep handles dry, clean, and free from oil and grease.** Greasy, oily handles are slippery causing loss of control.
12. **Cut wood only. Do not use chain saw for purposes not intended. For example: do not use chain saw for cutting plastic, masonry or non-wood building materials.** Use of the chain saw for operations different than intended could result in a hazardous situation.

2.4. CAUSES AND OPERATOR PREVENTION OF KICKBACK

Kickback can occur if the front or end of the chain guide touches an object or if the cut in the wood closes and traps the cutting chain in the cut.


Tip contact in some cases may cause a sudden reverse reaction, kicking the guide bar up and back towards the operator.

Pinching the saw chain along the top of the guide bar may push the guide bar rapidly back towards the operator.

Either of these reactions may cause you to lose control of the saw which could result in serious personal injury. Do not rely exclusively upon the safety devices built into your saw. As a chain saw user, you should take several steps to keep your cutting jobs free from accident or injury.

Kickback is the result of tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below:

1. **Maintain a firm grip, with thumbs and fingers encircling the chain saw handles, with both hands on the saw and position your body and arm to allow you to resist kickback forces.** Kickback forces can be controlled by the operator, if proper precautions are taken. Do not let go of the chain saw.
2. **Do not overreach and do not cut above shoulder height.** This helps prevent unintended tip contact and enables better control of the chain saw in unexpected situations.
3. **Only use replacement bars and chains specified by the manufacturer.** Incorrect replacement bars and chains may cause chain breakage and/or kickback.
4. **Follow the manufacturer's sharpening and maintenance instructions for the saw chain.** Decreasing the depth gauge height can lead to increased kickback.

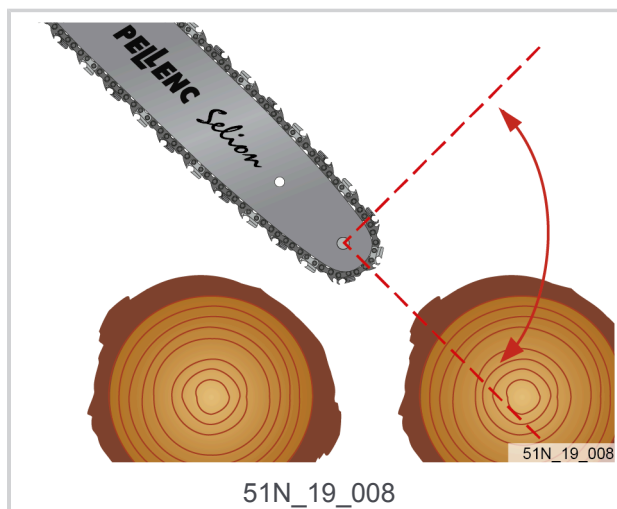

2.5. SAFETY MEASURES RELATED TO THE USE OF THE PELLENC BATTERY AND CHARGER


Refer to the instructions supplied with the PELLENC battery and charger.

2.6. PERSONAL PROTECTION EQUIPMENT

		<table> <tr> <th></th><th>Equipment</th><th>Wearing of</th></tr> <tr> <td>1</td><td>Safety helmet</td><td>Mandatory</td></tr> <tr> <td>2</td><td>Protective visor</td><td>Recommended</td></tr> <tr> <td>3</td><td>Resistant work gloves</td><td>Mandatory</td></tr> <tr> <td>4</td><td>Safety footwear</td><td>Mandatory</td></tr> <tr> <td>5</td><td>Ear protection</td><td>Mandatory</td></tr> <tr> <td>6</td><td>Protective goggles</td><td>Required</td></tr> <tr> <td>7</td><td>Safety jacket or over-sleeves</td><td>Mandatory</td></tr> <tr> <td>8</td><td>Work trousers</td><td>Mandatory</td></tr> </table>		Equipment	Wearing of	1	Safety helmet	Mandatory	2	Protective visor	Recommended	3	Resistant work gloves	Mandatory	4	Safety footwear	Mandatory	5	Ear protection	Mandatory	6	Protective goggles	Required	7	Safety jacket or over-sleeves	Mandatory	8	Work trousers	Mandatory
	Equipment	Wearing of																											
1	Safety helmet	Mandatory																											
2	Protective visor	Recommended																											
3	Resistant work gloves	Mandatory																											
4	Safety footwear	Mandatory																											
5	Ear protection	Mandatory																											
6	Protective goggles	Required																											
7	Safety jacket or over-sleeves	Mandatory																											
8	Work trousers	Mandatory																											

2.7. SAFETY SIGNAGE

1. L_{WA} sound power level guaranteed
2. Chain guide size (useful cutting length)
3. Read the user guide
4. Safety goggles, hearing protection and a protective helmet must be worn
5. Wearing of safety shoes and work trousers is mandatory
6. Risk of burns, hot surfaces (motor)
7. Do not expose to rain

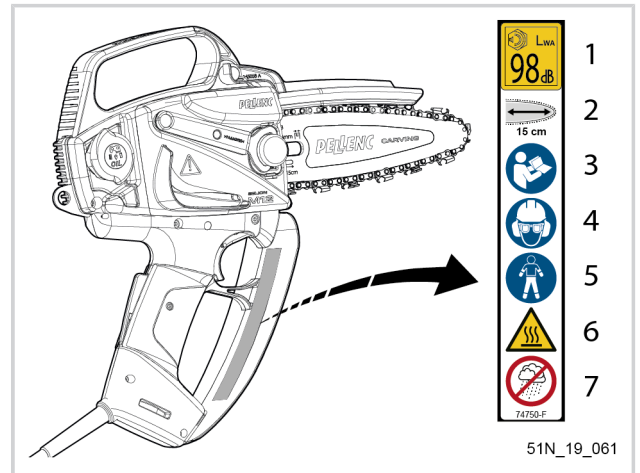


2.8. RESIDUAL RISKS

Even when using the Chainsaw Selion M12 as intended, there is always a degree of unavoidable residual risk. The following potential risks may apply:

- Risk of cuts due to contact with exposed saw teeth of the Chainsaw Selion M12
- Risk of cuts due to contact with the moving chain
- Risk of cuts due to unexpected and sudden movement of the guide bar
- Risk of cutting or piercing injuries related to the projection of parts of the Chainsaw Selion M12
- Risk of projections of splinters, bark, etc. while sawing
- Risk of allergy related to skin contact with chain oil
- Risk of fire resulting from cutting of certain particularly flammable wood species
- Risk of electrification / electrocution in the event of contact or proximity between the chainsaw and live cables.

3. DESCRIPTION AND TECHNICAL CHARACTERISTICS

3.1. DESCRIPTION

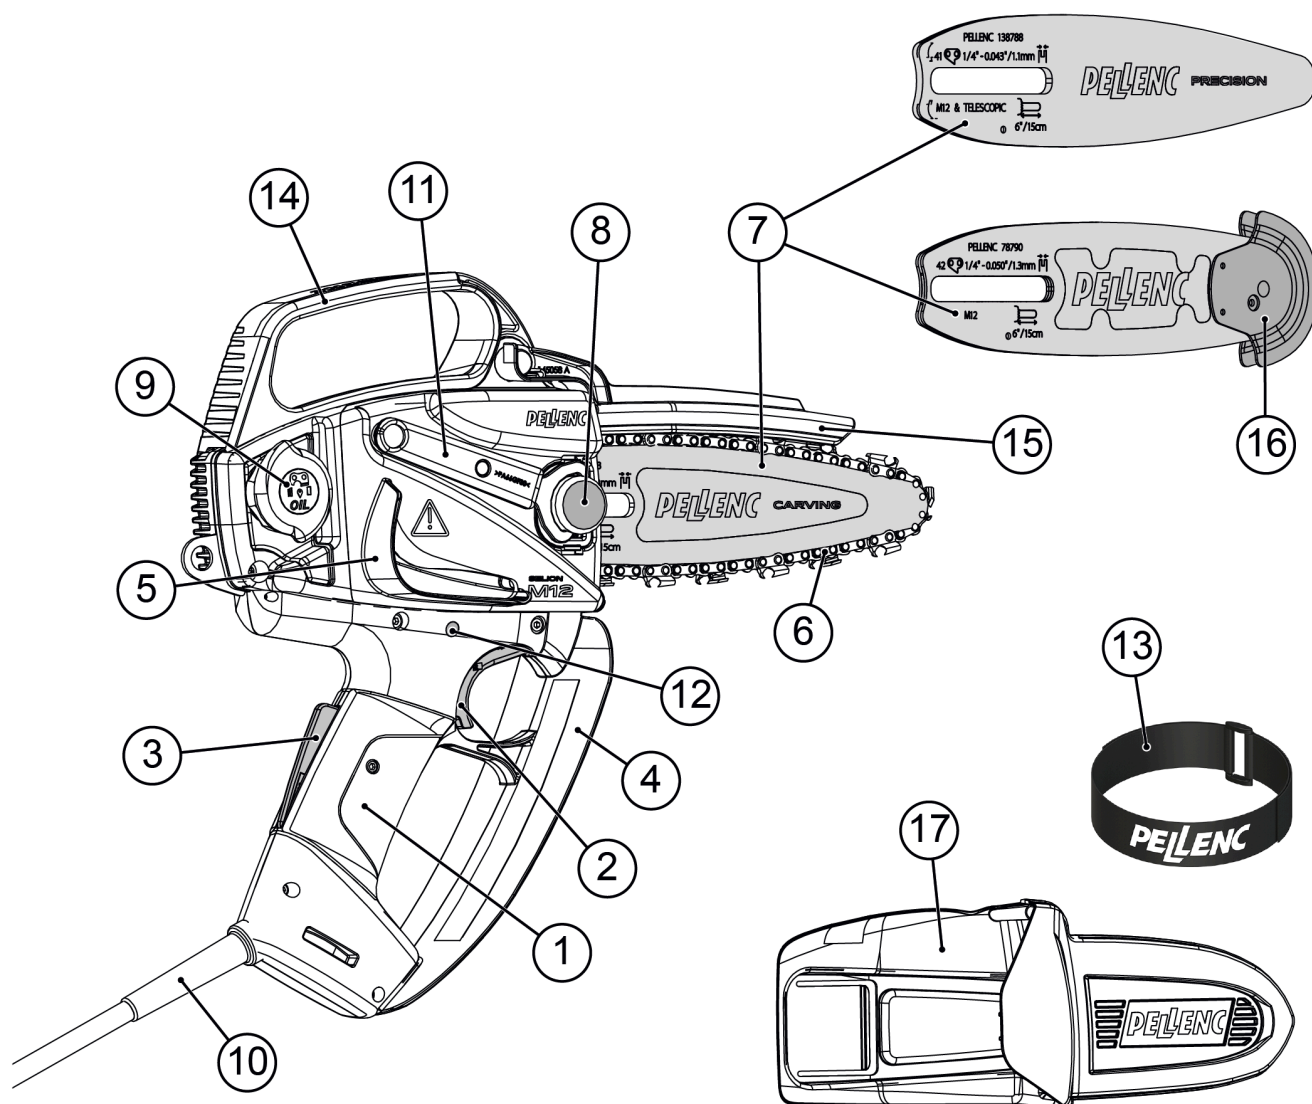

1. Handle
2. Operating trigger
3. Safety trigger
4. Right hand guard
5. Chain casing
6. Saw chain
7. Chain guide
8. Chain guard tightening nut

9. Oil tank cap
10. Tool power cable
11. Telescopic tightening wrench
12. "On" light
13. Arm band
14. Left hand safety guard
15. Retractable chain guard
16. Anti kickback guide bar nose
17. Chain guard

51N_19_062

3.2. TECHNICAL FEATURES

3.2.1. GENERAL CHARACTERISTICS

	Selion M12
Battery life	Depending on the use and type of battery
Chain oil tank capacity	7 cl
Useful cutting length / chain guide	See the chart Section 3.2.2, "Chains and chain guides compatibility"
Chain Type / Pitch / Gauge	
Battery compatibility	ULIB 250 / ALPHA 260 / ALPHA 520 / ULIB 700 / ULIB 750 / OLIVION +
Sprocket wheel	9-tooth 1/4"
Chain speed	10.3 m/s
Weight of tool without guide or chain	1.95 kg

3.2.2. CHAINS AND CHAIN GUIDES COMPATIBILITY

Chain guide type	Chain guide size (useful cutting length)	Chain pitch	Chain gauge	Chain guide reference	Chain reference
Carving guide (sold as standard)	15 cm (6")	6.35 mm (1/4")	1.3 mm (0.05")	80343	71550
Anti-kickback guide (sold as an option)	15 cm (6")	6.35 mm (1/4")	1.3 mm (0.05")	78790	71550
Precision guide (sold as an option)	15 cm (6")	6.35 mm (1/4")	1.1 mm (0.04")	138788	138880

3.2.3. CHARGERS AND BATTERIES COMPATIBILITY

Battery	Charger	Remarks
ULIB 250	CB5010HV	
ALPHA 260	CB5022; CB5022HV	*with adapter cord ref. 57239
ALPHA 520	CB5022 ; CB5022HV	*with adapter cord ref. 57239
ULIB 700	CB5022; CB5022HV	
ULIB 750	CB5022; CB5022HV	
OLIVION+	CB5022; CB5022HV	

3.2.4. NOISE LEVELS

Determination of the sound levels is based on the operating conditions at the nominal maximum speed.

Noise value measured by EN 60745-1 and EN ISO 60745-2-13	
Level of acoustic pressure measured at the work position (uncertainty of K_{pA} = 3 dB (A))	L_{pA} = 84 dB(A)
Sound power level (measurement uncertainty K_{WA} = 3 dB (A)).	L_{WA} = 95 dB(A)

3.2.5. VIBRATION LEVELS

Determination of the vibration levels is based on the operating conditions at the nominal maximum speed.

Vibration level according to 6.2 of EN 60745-1 and EN 60745-2-13	
Vibration emission value (measurement uncertainty $K = 1.5 \text{ m / s}^2$)	$a_h < 2.5 \text{ m/s}^2$

4. COMMISSIONING

4.1. CONTENTS OF THE KIT

Make sure the carton contains:

- A Chainsaw Selion M12 that comes with:
 - 1 carving chain guide (7),
 - 1 saw chain (6),
 - 1 chain guard (17),
 - 1 arm band (13),
 - 1 user guide,
 - 1 warranty card.

4.2. USEFUL TIPS FOR COMMISSIONING



Caution

Always disconnect the tool battery before starting tool maintenance.


- Use products recommended by PELENC.
- In the event of any problem, consult an authorised PELENC distributor.

4.3. ASSEMBLY OF THE CHAIN AND CHAIN GUIDE (1ST USE)

Note

Refer to the numbering of the parts in the illustration Section 3.1, "Description".


1. Remove the chain protector (5) and remove the foam plug that blocks the oil outlet before fitting the bar and chain.

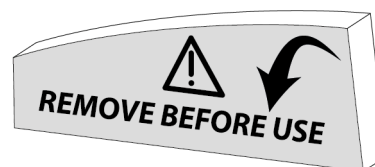

51N_19_060

The chain guide and the chain are delivered unassembled. Assemble the chain guide and the chain.

2. Position the chain guide (7) in its place.
3. Push the guide (7) towards the sprocket to engage the lock.
4. Fit the chain (6) while respecting the cutting direction.
5. Refit the chain protector (5).
6. Retighten the lock nut (8) using the captive telescopic tightening wrench (11). During this operation, the automatic chain tensioning mechanism should be triggered.

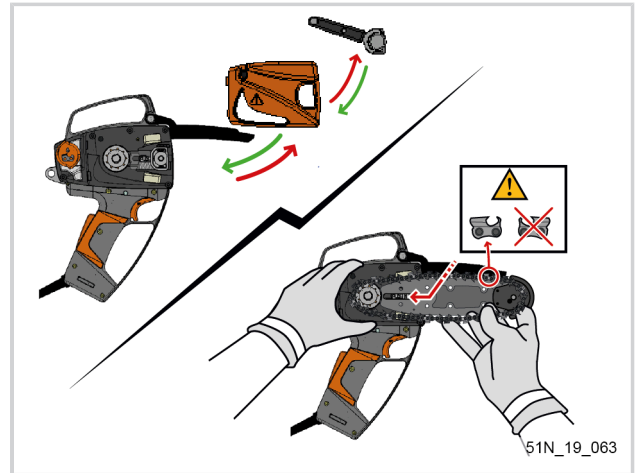

Note



For more details on the procedure, consult: Section 6.4, "REPLACING THE CHAIN AND THE CHAIN GUIDE".

4.3.1. CHAIN GUIDE FUNCTIONS

- 4.3.1.1. THE ANTI-KICKBACK CHAIN GUIDE

The anti-kickback chain guide can be used for:


- regular trimming
- restructuring orchards to allow passage between two rows of trees.

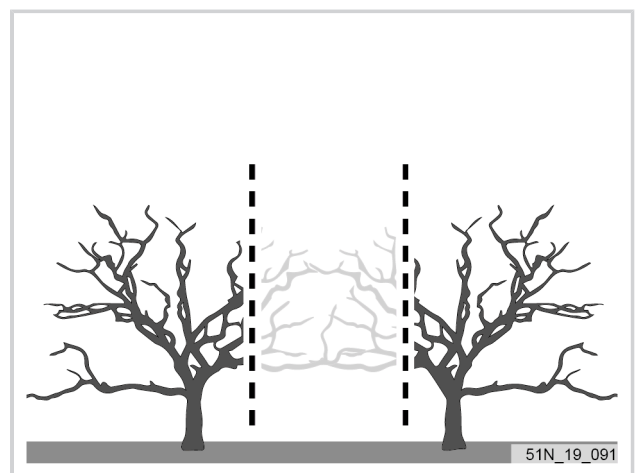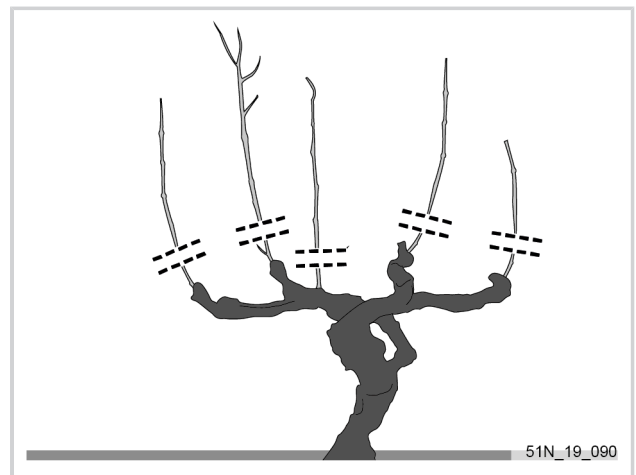


- 4.3.1.2. THE CARVING CHAIN GUIDE

The carving chain guide has a very narrow profile that allows for easier access to difficult areas, while incurring very little kickback. It is used for more precise cuts such as:

- surgical trimming of the tree or vine (curettage of diseased vines),

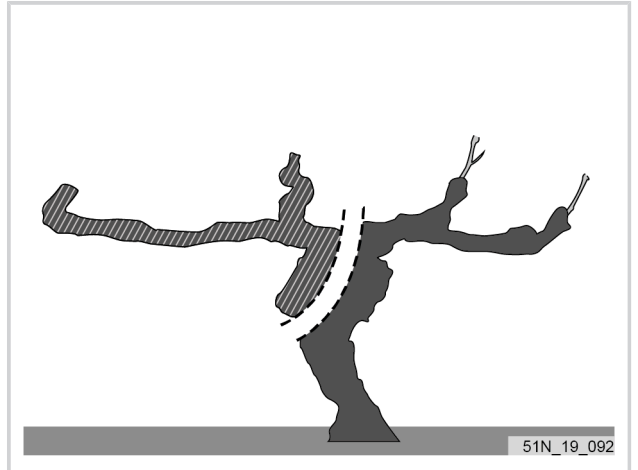

- selective trimming in dense vegetation on fruit trees

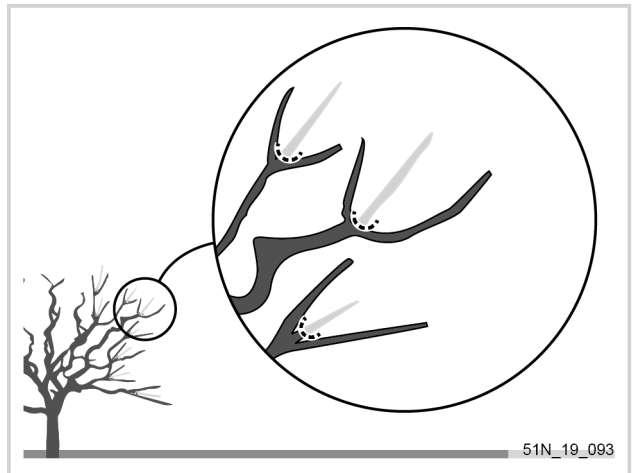


- 4.3.1.3. PRECISION CHAIN GUIDE


The precision chain guide, like the carving chain guide, has a very narrow profile and has the same advantages. The reduced thickness of the precision guide ensures a cleaner cut and a reduction in energy consumption.

4.4. AUTOMATIC CHAIN TENSIONING (FIRST USE)


1. Loosen the chain guard (8) lock nut by 3 turns.

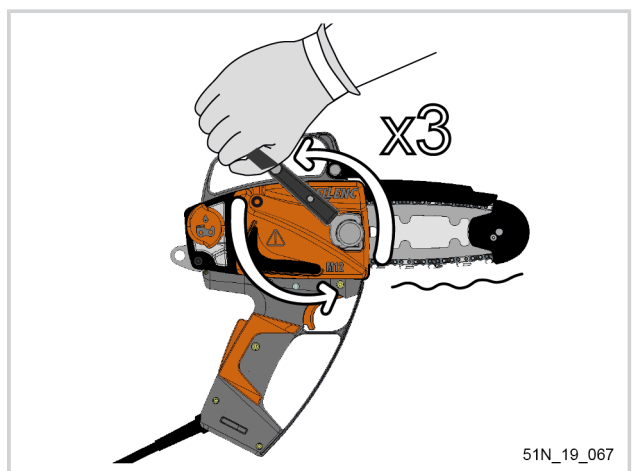

2. Tighten the chain guard lock nut (8) correctly using the telescopic wrench (11), the chain guide (7) then moves forward and automatically tensions the chain (6).

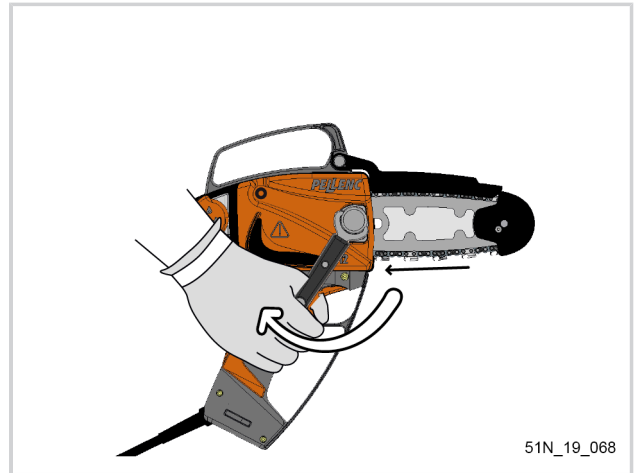


3. Re-position the handle of the telescopic wrench (11) on its holding magnet.

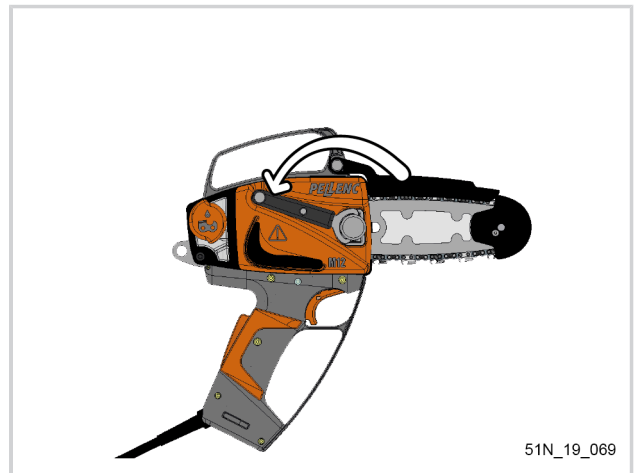

Checking the tension of the chain

Important

Adjust the tension as often as necessary. Tension is checked by pulling on the chain (6) in the middle of the chain guide: 1 to 3 drive links should appear.

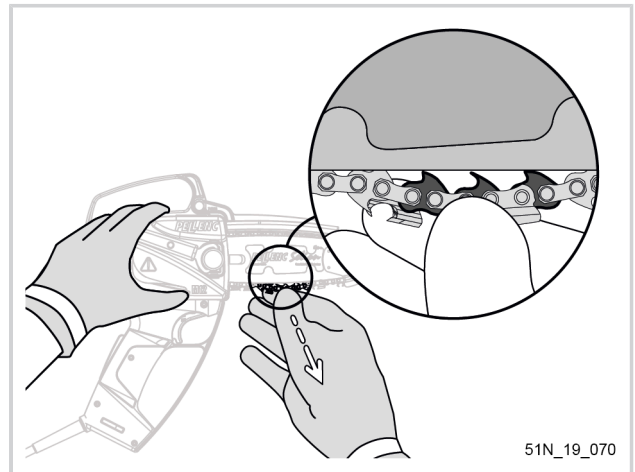

4.5. CHAIN LUBRICATION (FIRST USE)


4.5.1. FILLING THE CHAIN OIL RESERVOIR

Before the first use, it is essential to fill the chain oil reservoir with the specific chain and guide oil (Ref.: 116688)

1. Unscrew the guide and chain oil reservoir cap (9)
2. Carefully pour the guide and chain oil into the reservoir.
3. Tighten the chain oil tank cap (9)

Important

Check the oil level every hour and top it up if necessary.

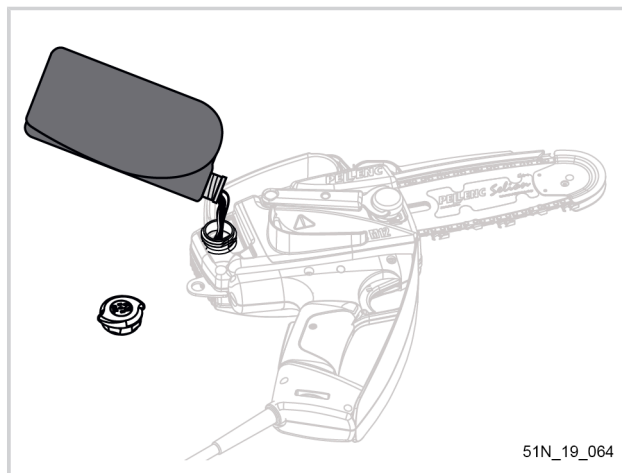

51N_19_064

Note

PELLENC recommends using a biodegradable chain oil that complies with the RAL-UZ-48 standard (ref. 116688, otherwise any oil that complies with the RAL-UZ-48 standard)

Consumables sold separately.




Warning

Never use dirty or used oil.

4.5.2. FIRST FORCED LUBRICATION CYCLE

The forced lubrication cycle distributes the oil from the reservoir to the different components. It is imperative to carry out this forced lubrication cycle before first use of the Chainsaw Selion M12.

1. Press and hold the triggers (3) and (2).
2. Switch on the battery (see Section 5.3, "Switching the battery on and off".)
3. An automatic cycle starts which sends oil from the reservoir to the chain guide.
 - a. short beep every 20 seconds during the cycle.
 - b. 3 beeps to validate the end of the cycle.
4. Release the triggers when you hear the first beep.

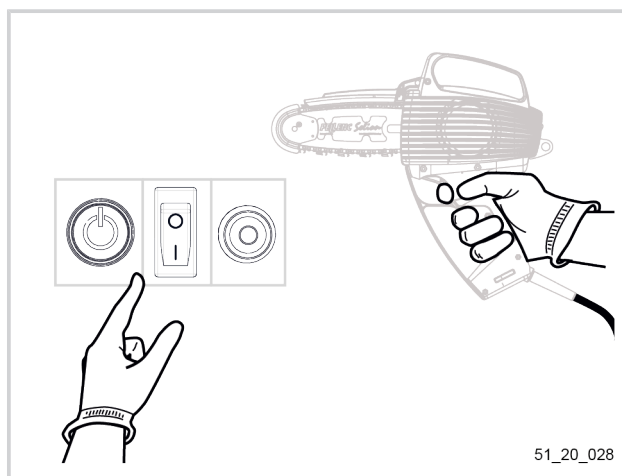

51_20_028

Note

The chain does not turn during the forced lubrication cycle phase.



Warning

- Ⓒ Carry out a forced lubrication cycle at the start of each season in order to check the chain lubricating function. Carry out forced lubrication whenever necessary.

4.6. RUNNING-IN (BEFORE FIRST USE)



Warning

- Ⓒ Before the first use, it is imperative to run-in the chain guide and chain.

To run-in the chain guide and the chain:

1. Run the chainsaw for 1 or 2 minutes without contact
2. After this running-in phase, check the tension of the chain, and tighten it if necessary.

Note


Once all commissioning procedures have been completed, the tool is ready for use

4.7. CHAIN PROTECTION


Put on the chain protector whenever transporting, handling and storing the tool.

Note

Never transport the chainsaw without its protective cover. The chainsaw must always have its protective cover on when moved.

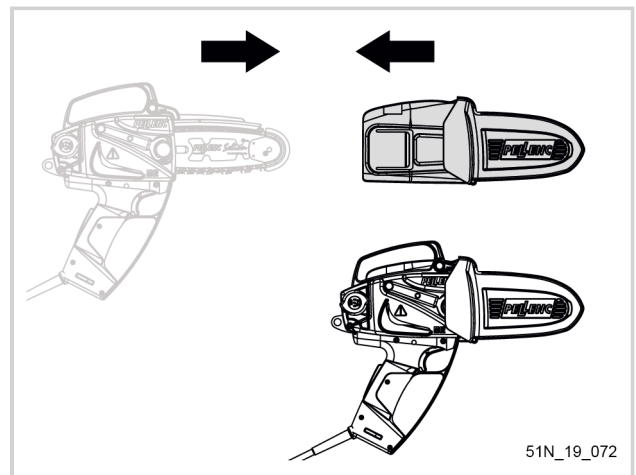

The chain protector can be used as a holster that hangs from the belt.

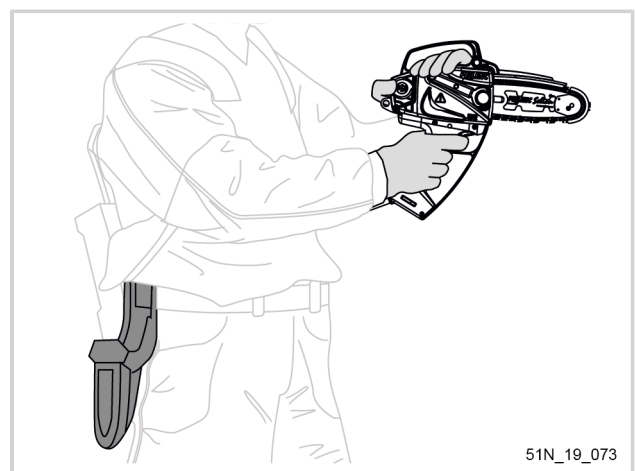

4.8. FITTING THE BATTERY ON THE HARNESS

To mount the battery on your harness, refer to the mounting instructions provided with your harness.

Important

After mounting, the battery must be solidly attached and secured on your harness. If this is not the case then the mounting needs to be re-checked.

4.9. CONNECTING PELLENC BATTERIES TO THE TOOL


Important

Always check the remaining battery-life before use. If necessary, recharge the battery using the charger.

To prolong the life of the connectors, it is advisable to protect them when they are disconnected. Avoid leaving the connectors in contact with abrasive or dirty surfaces, or subjecting them to major impacts (falls).

4.9.1. ULIB 250 BATTERY


1. Connect the power cord (10) of the Chainsaw to the connector on the battery.
2. Screw it in all the way.
3. Check that the power cord is properly connected.

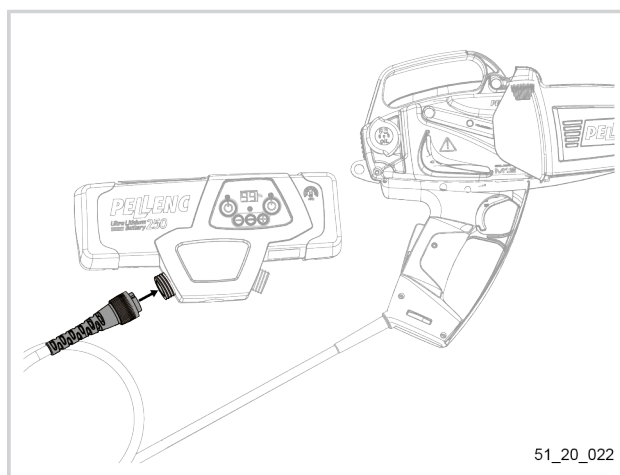

51_20_022


4.9.2. ULIB 750 / ALPHA 260 / ALPHA 520 BATTERIES

1. Connect the power cord (10) of the Chainsaw to the red connector of the quick connector adaptor (ref. 57262).
2. Screw it in all the way.
3. Check that the power cord is properly connected.

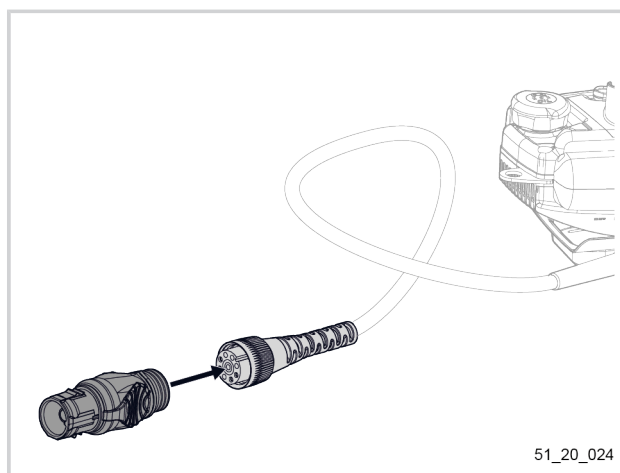


51_20_024

4. Connect the quick connector adapter to the adapter cord.

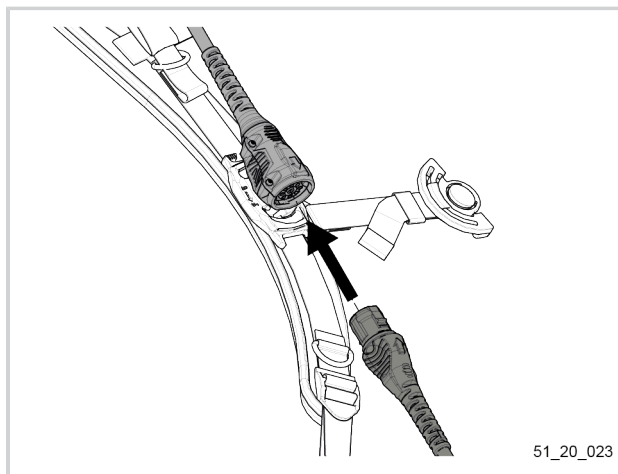

4.9.3. ULIB 700 / OLIVION+ BATTERY

1. Before electrically connecting the battery to the Chainsaw, check that the battery switch is in the 'off' position (position '0').
1. Connect the power cord (10) of the Chainsaw to the connector on the battery.
2. Screw it in all the way.
3. Check that the power cord is properly connected.

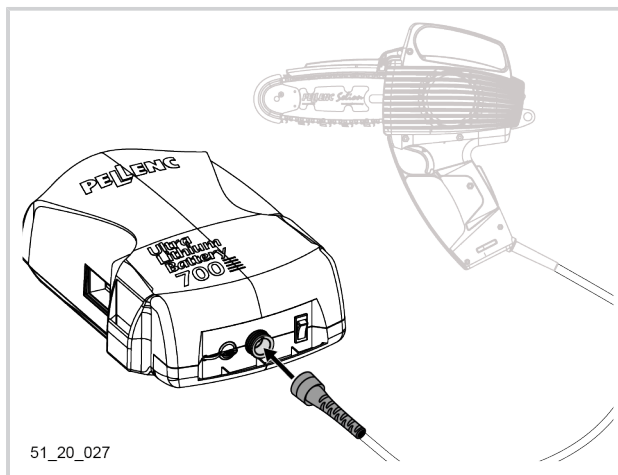

4.10. DISCONNECTING PELLENC BATTERIES FROM THE TOOL


Important

To prolong the life of the connectors, it is advisable to protect them when they are disconnected. Avoid leaving the connectors in contact with abrasive or dirty surfaces, or subjecting them to major impacts (falls).


For more information on PELLENC batteries see the battery instructions.

4.10.1. ULIB 250 BATTERY


1. Unscrew the connector safety ring to release the power cord (10).

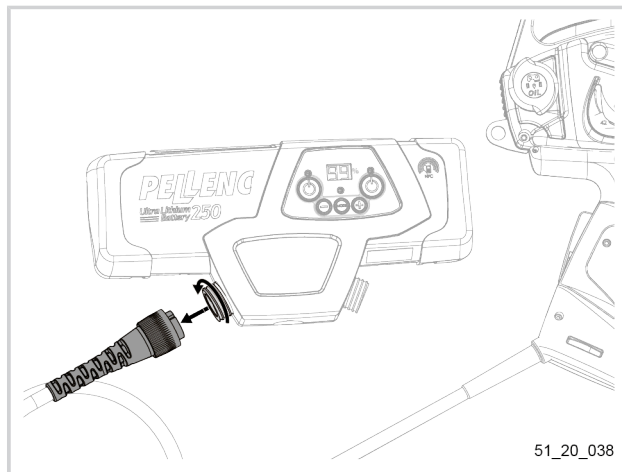**4.10.2. ULIB 750 / ALPHA 260 / ALPHA 520 BATTERIES**

1. Disconnect the tool's power cord from the extension cord.

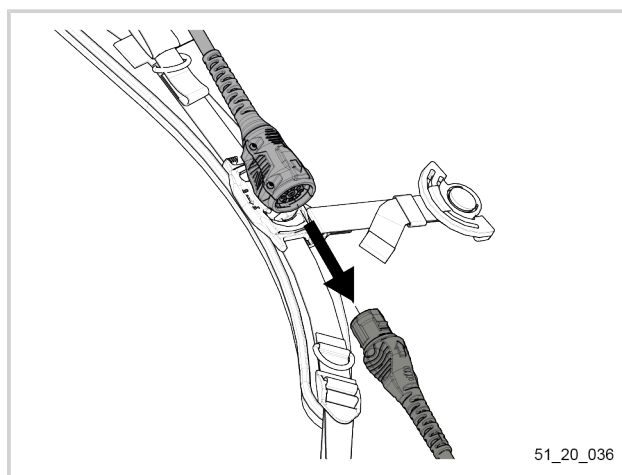**4.10.3. ULIB 700 / OLIVION+ BATTERY**

1. Unscrew the connector safety ring to release the power cord (10).

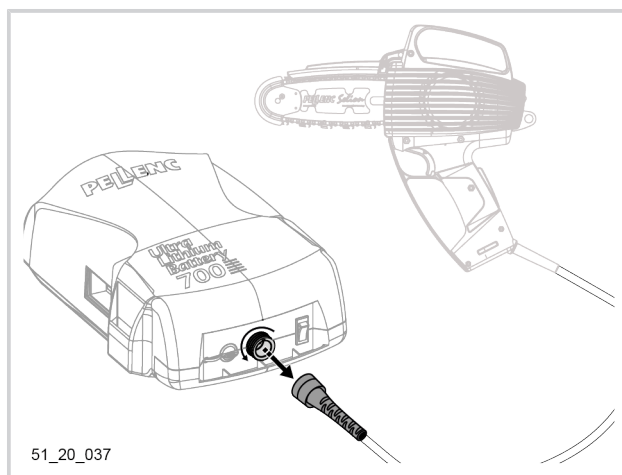

5. USAGE

5.1. USAGE SITUATION

Do not use the chainsaw to prune trees one-handed when in an unstable work position. It is preferable to use a hand saw when cutting small diameter wood at the ends of branches.

Tree service chainsaws should only be used one-handed where:

- operators cannot gain a work position enabling two-handed use, and
- they need to support their working position with one hand, and
- the when saw is being used at full stretch, at right angles to and out of line with and away from the operator's body.



Warning

Never cut with the kickback zone at the tip of the chainsaw guide bar,

Never hold the section being cut.

Never attempt to catch falling sections.


5.2. ADJUSTING THE HARNESS

1. Put on your harness. To adjust your harness according to your body size, refer to the fitting instructions provided with your harness.

5.3. SWITCHING THE BATTERY ON AND OFF

5.3.1. ULIB 250 BATTERY


Press the battery On/Off button.

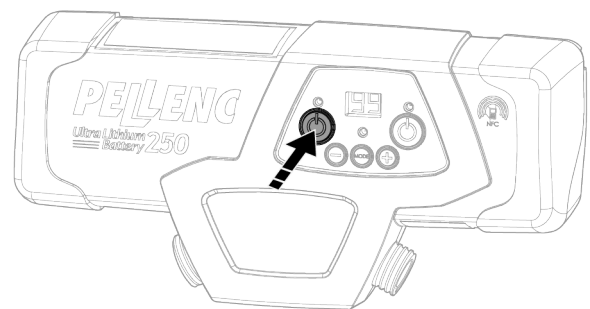

51_20_029

5.3.2. ULIB 750 BATTERY


Press one of the 2 battery On/Off buttons.

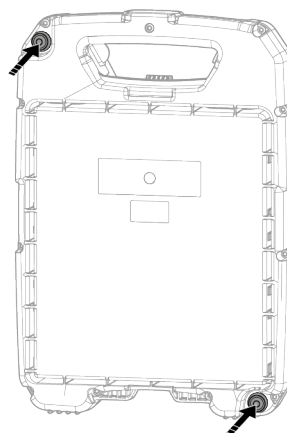

51_20_029

5.3.3. ALPHA 260 / ALPHA 520 BATTERY


Press the battery On/Off button.

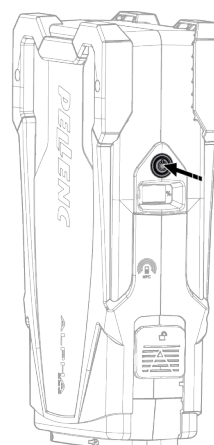

51_20_031

5.3.4. ULIB 700 / OLIVION+ BATTERY

- Switching on: put the switch in the "0" position.
- Switching off: put the switch in the "I" position.

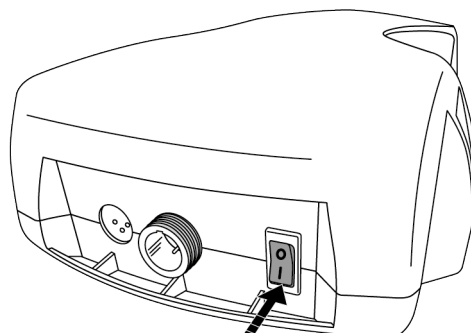

51_20_021


5.4. HOLDING THE TOOL

1. Take the chainsaw by the handles and ensure nothing is touching the chain.
2. Attach the power supply cord to your arm using the supplied armband.
3. The chainsaw is in its "start-up" position.



Warning

ⓐ Never disconnect the power cord from the battery without checking that the On / Off switch is in the off position «0».

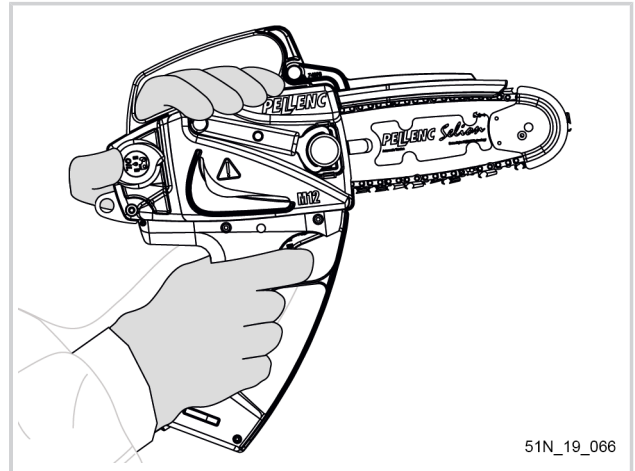

51N_19_066



Caution

ⓐ Do not cut anything other than wood.

Always keep your left hand on the front handle.

5.5. START-UP

Note

The indicator on the rear handle indicates that the tool is switched on



Caution

Always start the motor before bringing the chainsaw into contact with the wood.

1. Remove the chain guide protector.
2. Set the Pellenc tool battery On/Off switch to the On position "I". From the moment the indicator light (12) comes on, the tool is energized and ready to operate.
3. Keep the safety trigger (3) pressed while holding the chainsaw by the rear handle with your right hand and the front handle with your left hand.
4. In order to guarantee chainsaw safety when relocating, an electronic device blocks the motor control 3 seconds after the motor is stopped. Press the trigger (2) twice consecutively to restart the motor. The chainsaw chain continues to turn as long as the trigger (2) is maintained pressed.
5. Release the trigger (2) to stop the motor.



Warning

ⓐ When either the guide or the chain is replaced, they must be run in by operating the tool without sawing for 1 to 2 minutes. Check the chain tension after the running-in phase, see page Section 6.5, "Automatic chain tensioning".

Tip

Allow the chainsaw to cut without pressing excessively.

5.6. ELECTRONIC

Your chainsaw is fitted with an impact detection system. In the event of impact (kickback) your chainsaw will stop immediately.



Warning

Make sure the chain is not in contact with wood before restarting the chainsaw.



51N_19_074


5.6.1. CHECKING THE CHAIN BRAKE

Carry out sharp movements from top to bottom to activate the safety device.



Caution

Never operate the chainsaw if the safety device is not operating.

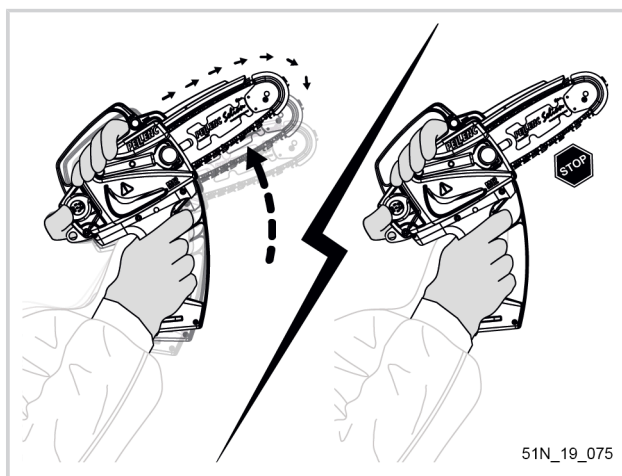

51N_19_075

6. SERVICE

6.1. MAINTENANCE ADVICE



Caution

Always disconnect the tool battery before starting tool maintenance.

- Use products recommended by PELENC.
- In the event of any problem, consult an authorised PELENC distributor.

6.2. THE FOUR BASIC RULES

- **Rule No. 1: The chain must be correctly tensioned.**

A properly tensioned chain improves cutting performance and reduces the risk of breakage and / or derailment of the chain.

Refer to procedure Section 6.5, "Automatic chain tensioning"



51N_19_024

- **Rule No. 2: The chain must be well lubricated.**

Constant lubrication reduces wear and the risk of breakage of components and of the tool.

Refer to procedure Section 6.6, "Chain lubrication"




51N_19_025

• **Rule No. 3: The chain must be sharpened.**

A properly sharpened chain improves cutting performance and reduces wear.

Refer to procedure Section 6.7, "Sharpening the chain"

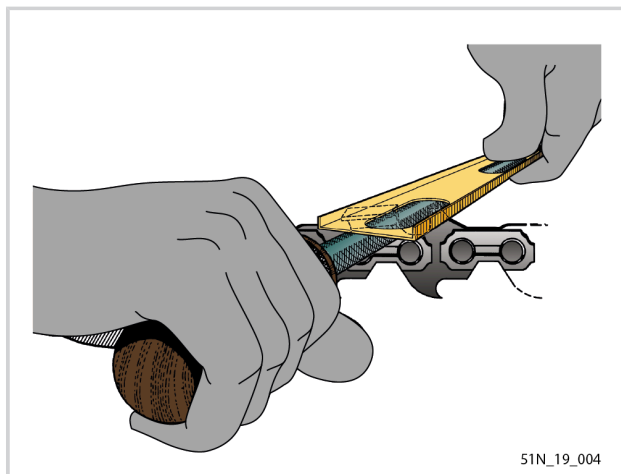


51N_19_004

• **Rule No. 4: The depth limiters must be correctly adjusted.**

The depth limiters must be correctly adjusted and of the right shape to ensure good performance and safety.

Refer to procedure Section 6.8, "Adjusting the depth limiters"

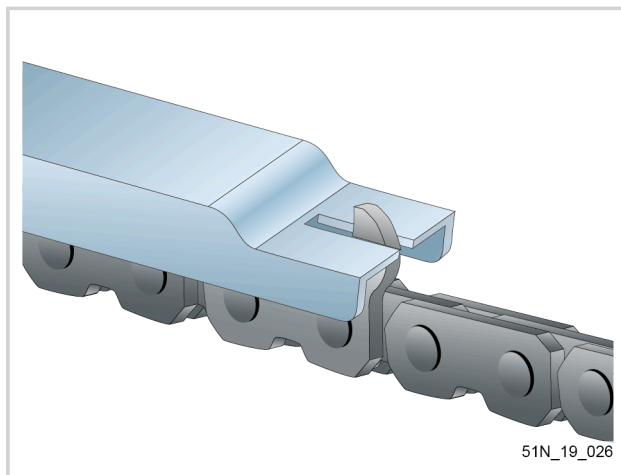

51N_19_026

6.3. MAINTENANCE FREQUENCY

	At each start-up	Every hour	Every 2 hours	Every week	After use	Every year or when necessary
Visual inspection of the tool	X					
Functional check of the safety throttle	X					
Check and topping up of the oil	X	X				
Checking the greasing of the chain	X					
Check and tensioning of the chain	X		X			
Checking that the chain is sharp	X		X			
Checking the chain brake	X					
Cleaning and cleaning the chain guide					X	
Greasing the chain guide					X	
Checking the sprocket for wear				X		
Checking the capacity of the battery	X					
Have the tool inspected by an authorised distributor						X



Warning

Ⓒ Overhaul the chainsaw every 200 hours or at least once a year. Always make sure the tool is clean and its battery is charged before storing it.

6.4. REPLACING THE CHAIN AND THE CHAIN GUIDE





Important




Do not use any chain guides or chains other than those recommended.



Note

The chain guide must be replaced whenever necessary or when 3 or 4 chains have been replaced.

Turn the chain guide round every week.

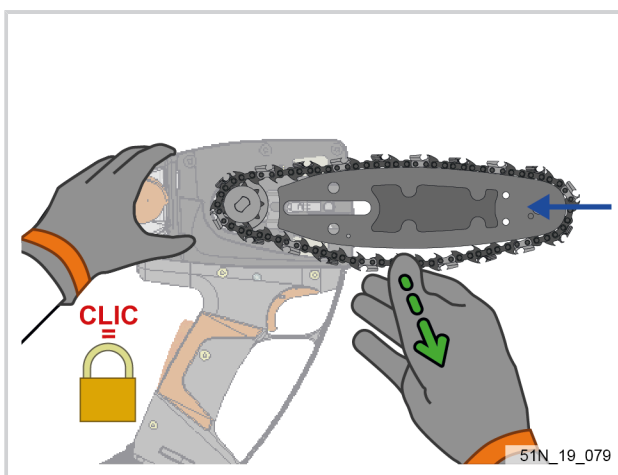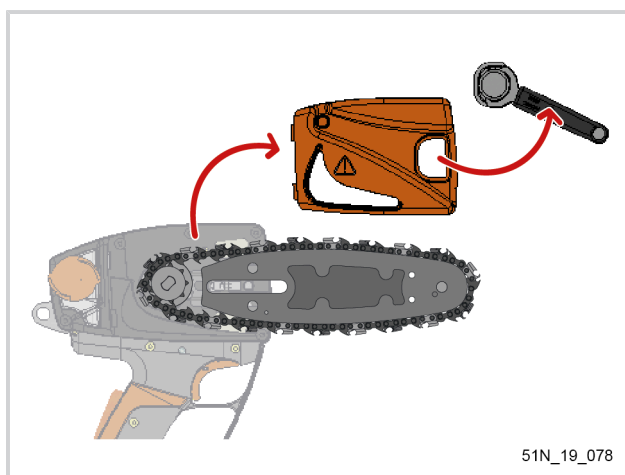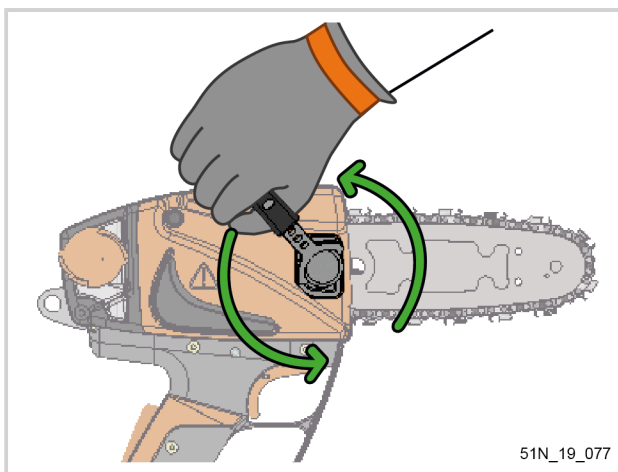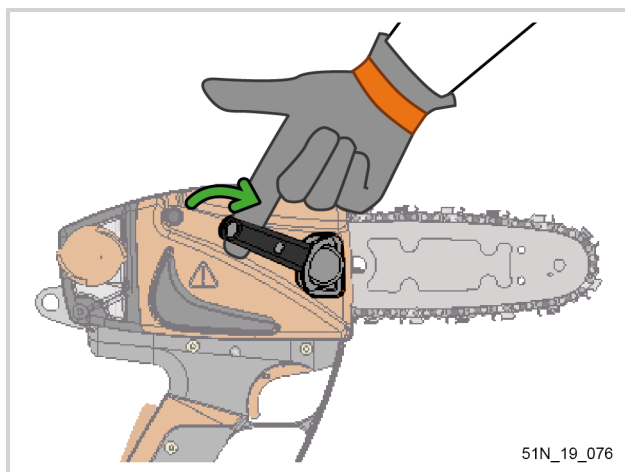

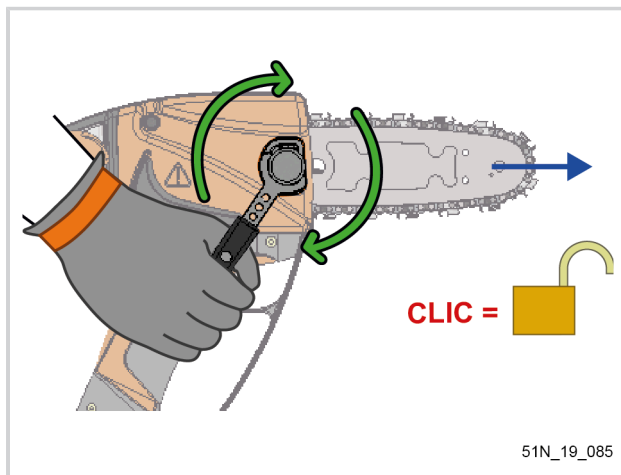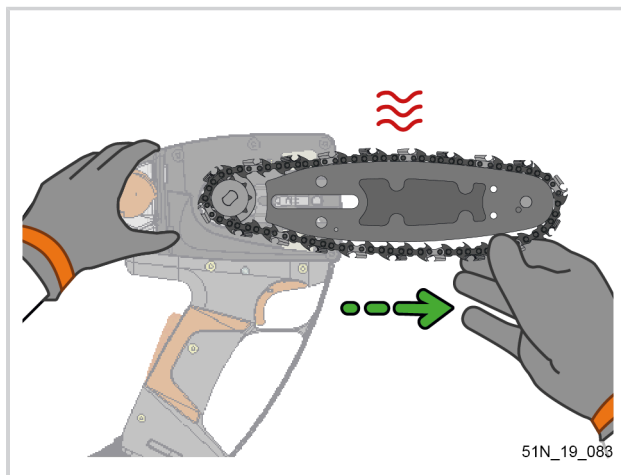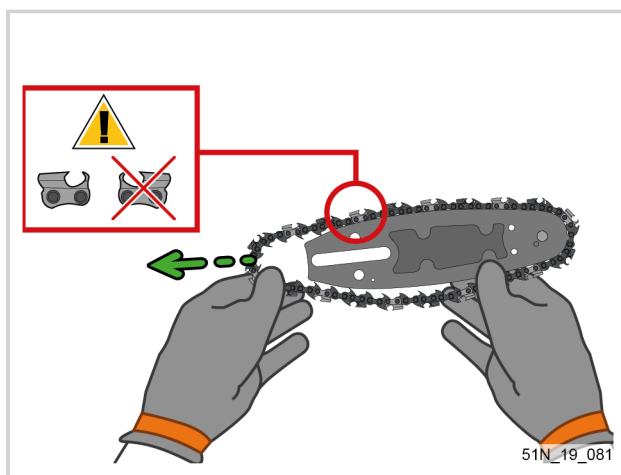

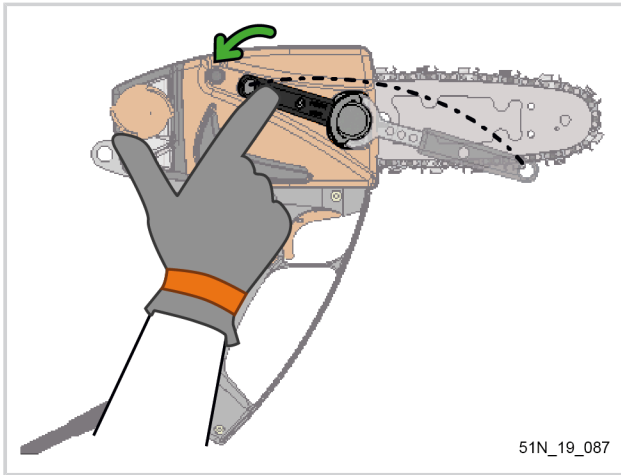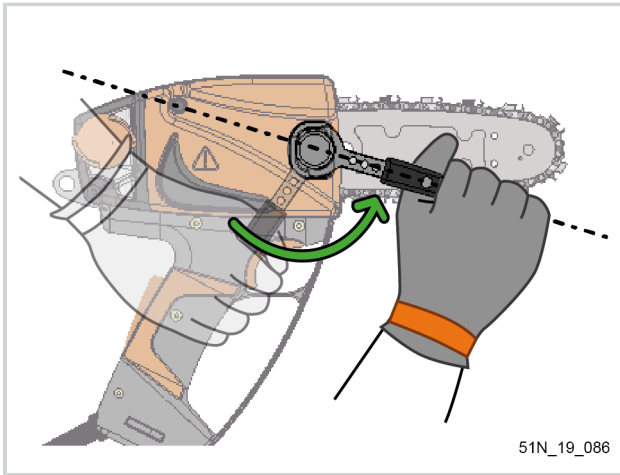

Caution

Ⓒ Never use a chain or a guide other than those specified by PELLENC, otherwise there is a risk of personal injury.


6.5. AUTOMATIC CHAIN TENSIONING

Important


Check and adjust the tension of the chain:

- prior to each use.
- frequently


1. Loosen the chain guard (8) lock nut by 3 turns.

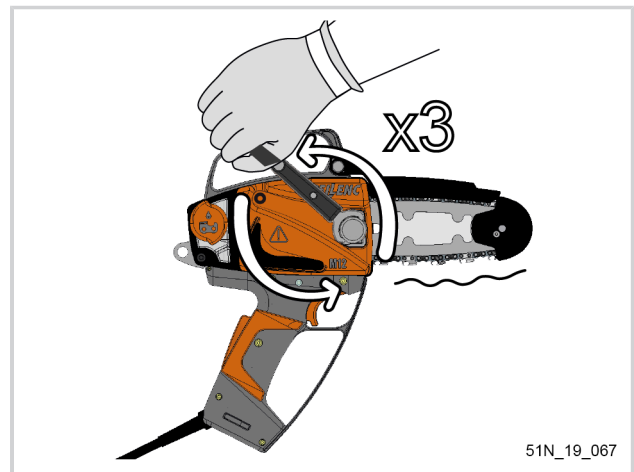

2. Tighten the chain guard lock nut (8) correctly using the telescopic wrench (11), the chain guide (7) then moves forward and automatically tensions the chain (6).

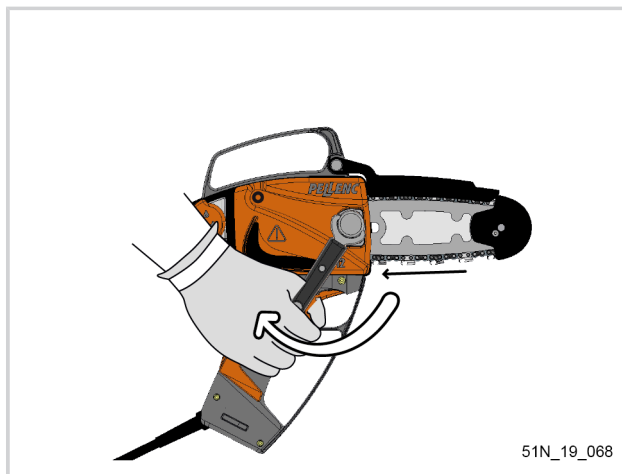


3. Re-position the handle of the telescopic wrench (11) on its holding magnet.

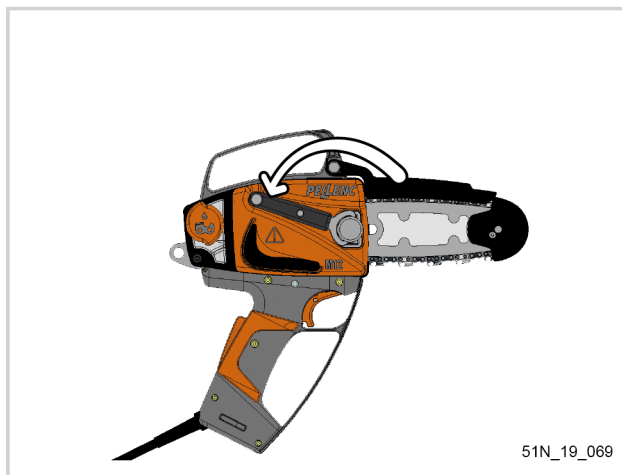

Checking the tension of the chain

Important

Adjust the tension as often as necessary. Check the tension by pulling the chain in the middle of the guide: 1 to 3 drive links should appear.

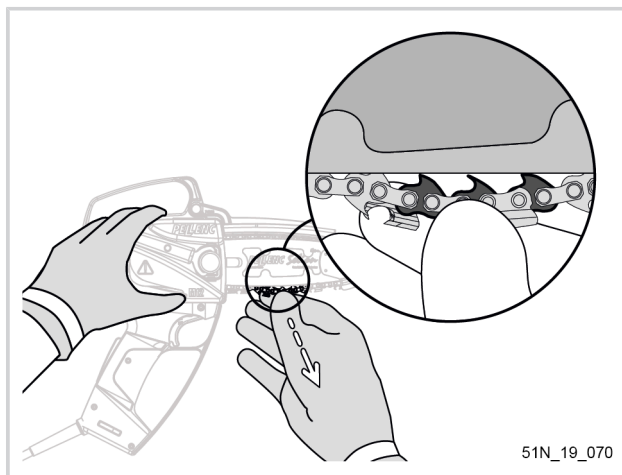

6.6. CHAIN LUBRICATION


6.6.1. FILLING THE CHAIN OIL RESERVOIR

Before the first use, it is essential to fill the chain oil reservoir with the specific chain and guide oil (Ref.: 116688)

1. Unscrew the guide and chain oil reservoir cap (9)
2. Carefully pour the guide and chain oil into the reservoir.
3. Tighten the chain oil tank cap (9)

Important

Check the oil level every hour and top it up if necessary.

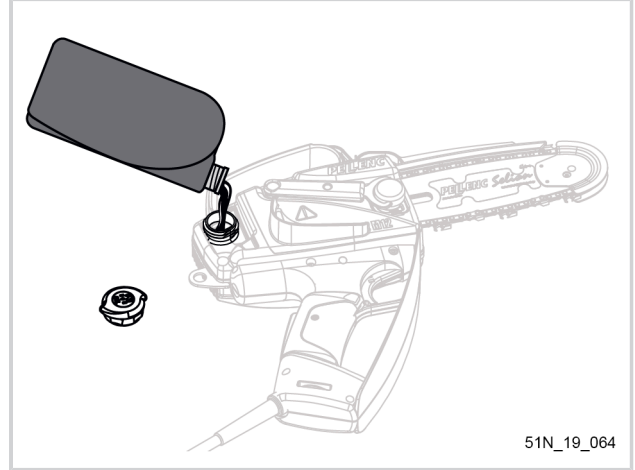

51N_19_064

Note

PELENC recommends using a biodegradable chain oil that complies with the RAL-UZ-48 standard (ref. 116688, otherwise any oil that complies with the RAL-UZ-48 standard)

Consumables sold separately.




Warning

Never use dirty or used oil.

6.6.2. FIRST FORCED LUBRICATION CYCLE

The forced lubrication cycle distributes the oil from the reservoir to the different components. It is imperative to carry out this forced lubrication cycle before first use of the Chainsaw Selion M12.

1. Press and hold the triggers (2) and (3).
2. Switch on the battery (see Section 5.3, "Switching the battery on and off".)
3. An automatic cycle starts which sends oil from the reservoir to the chain guide.
 - a. short beep every 20 seconds during the cycle.
 - b. 3 beeps to validate the end of the cycle.
4. Release both triggers when the first beep sounds

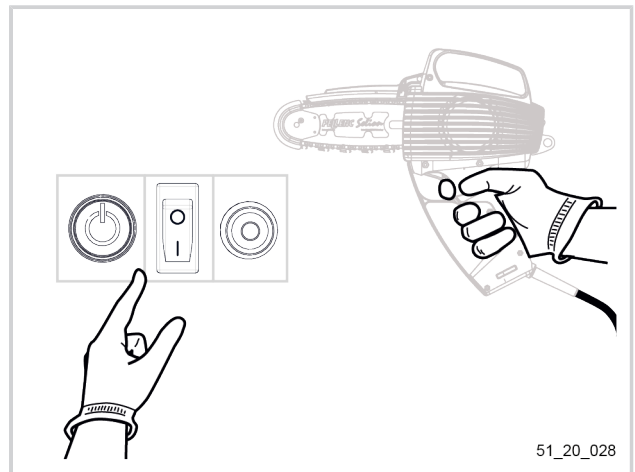

51_20_028



Warning

Ⓒ Carry out a forced lubrication cycle at the start of each season in order to check the chain lubricating function. Carry out forced lubrication whenever necessary.

6.7. SHARPENING THE CHAIN





1. Set the battery switch to "0" and disconnect the connector.
2. As shown on the diagram, place a file holder on the top platen and the depth limiter of the cutter.




Caution

Do not file the upper side of the drive links or attachment links fitted with an anti-kickback device.


3. Sharpen the cutters from one side of the chain by filing from the interior toward the exterior. Only file by pushing.
4. Hold the mark on the file holder parallel with the mark on the platen. Proceed in the opposite manner for the other side.

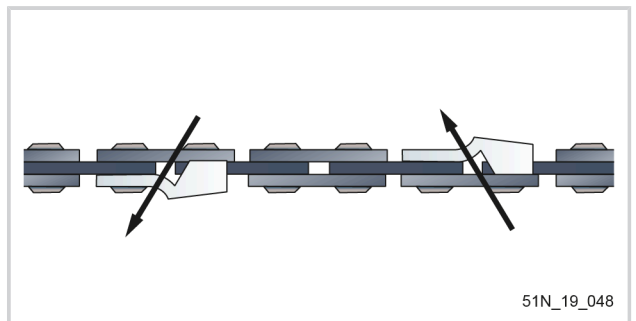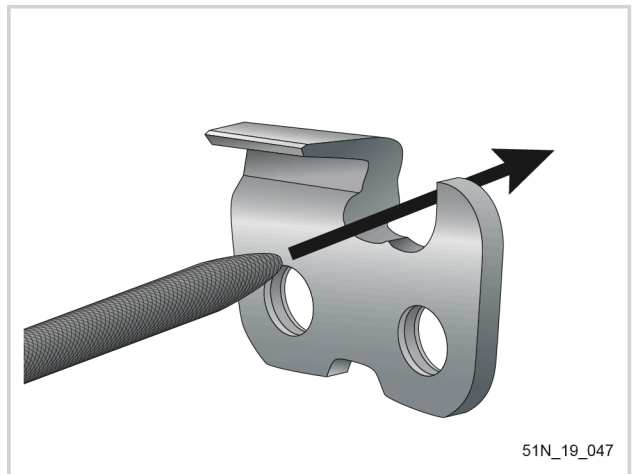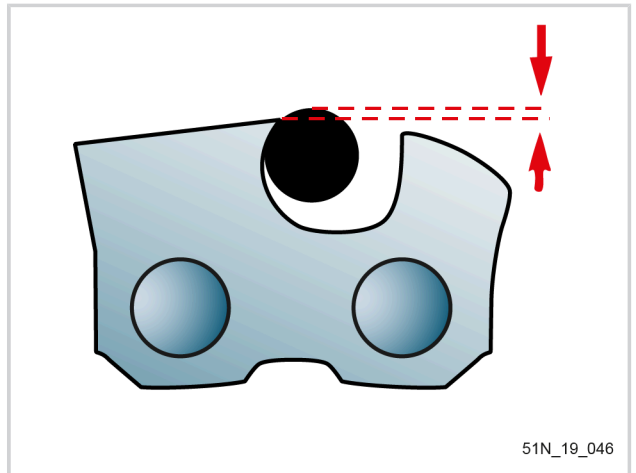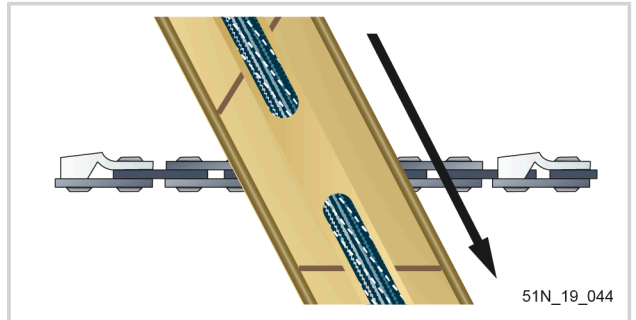

5. If the side platen or the top platen is damaged, file until this part is removed.

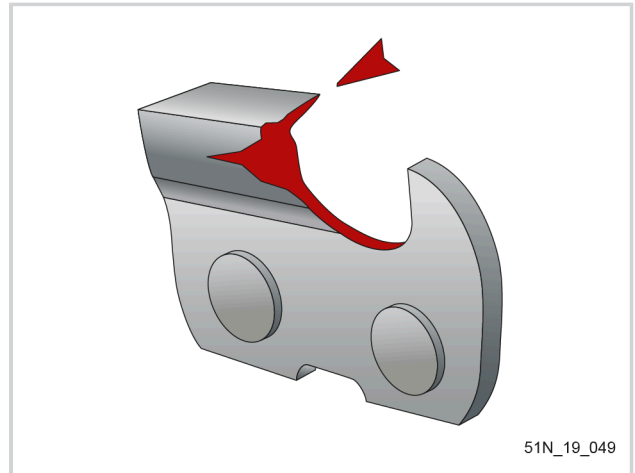

6. All the gouges must be same length.

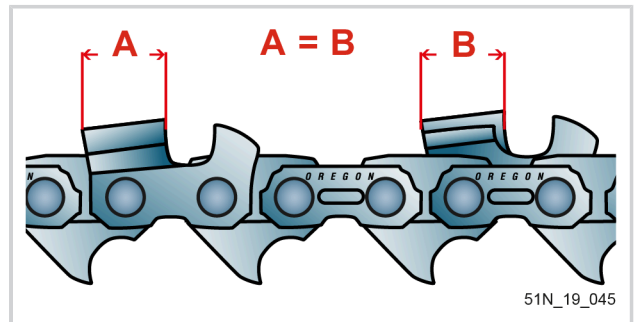


Important


After sharpening the cutters, check the depth limiters again. To do this follow the procedure Section 6.8, "Adjusting the depth limiters".

6.8. ADJUSTING THE DEPTH LIMITERS



1. Check the depth limiters every 2 or 3 sharpening operations.

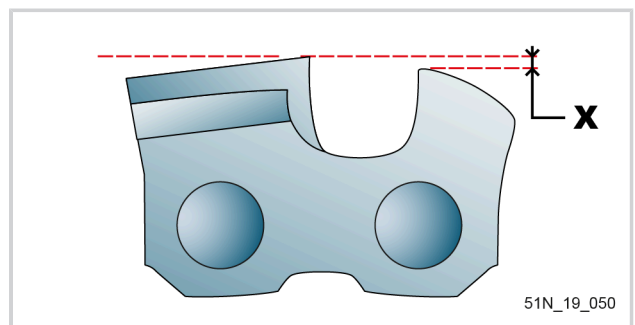

2. Use a depth gage corresponding to the type of chain to be sharpened. Place the depth gauge on the gouge.
3. If the depth limiter goes beyond, file it to the level of the depth gage using a flat file.

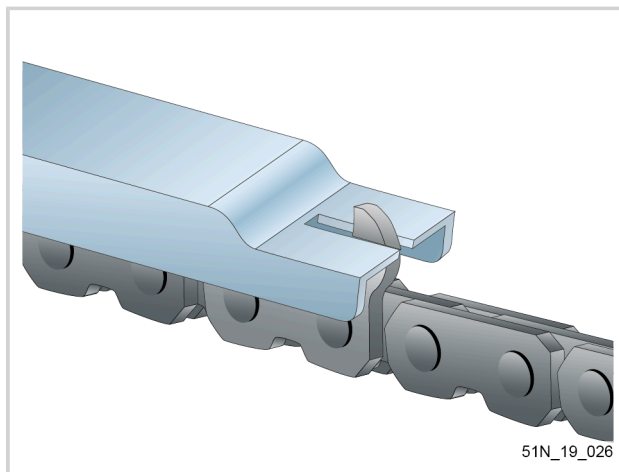


4. File from the interior of the cutter towards the exterior and away by pushing the file.

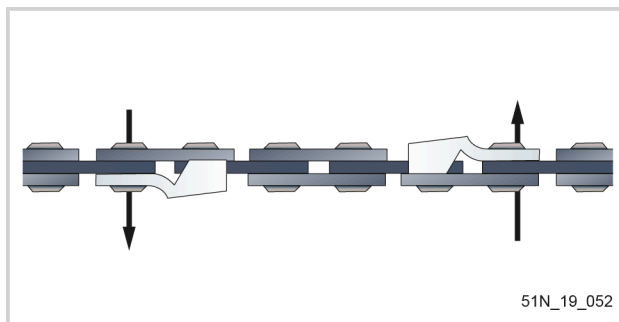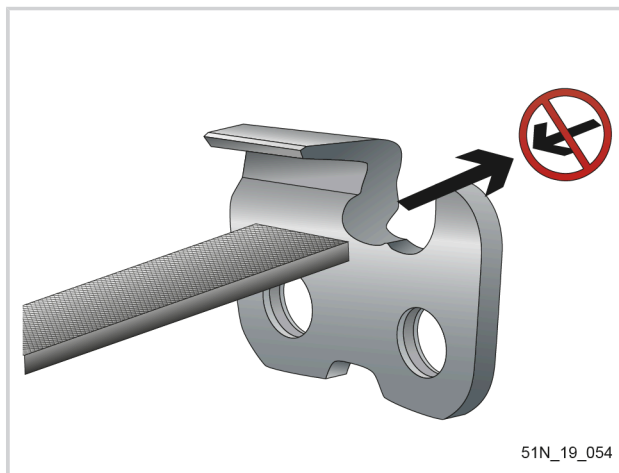

Caution


Do not file or damage the top of the drive links or the side links fitted with an anti-kickback guard.

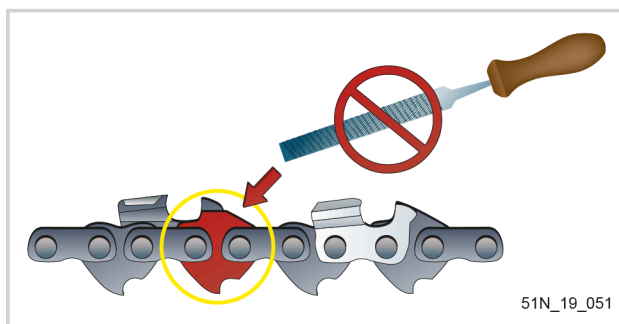

- After reducing the height of the depth limiters, round off the angle to maintain the original shape of the depth limiters.

Note

On chains with drive links equipped with anti-kick-back guards, it may be necessary to take the chain out of the guide in order to file the depth limiters correctly.

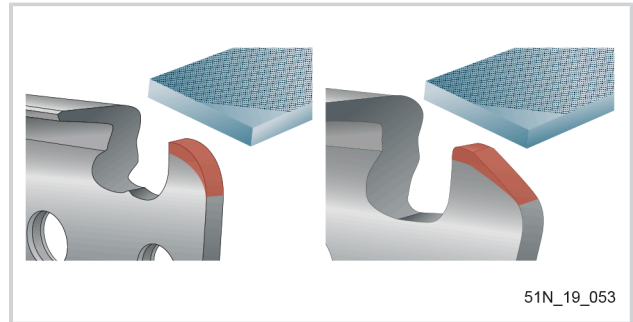

6.9. CHECKING AND REPLACING THE SPROCKET


Replace the sprocket if it is damaged or every 2 chain replacements (ref. 85643).

- Set the battery switch to "0" and disconnect the connector.
- Remove the chain guide (7) and the chain (6) (see. Section 6.4, "REPLACING THE CHAIN AND THE CHAIN GUIDE".)
- Remove the circlips and the sprocket
- Replace the sprocket
- Reinstall the assembly and pay attention to the direction of installation of the circlip.



Caution

The circlips must be replaced after each dismantling operation (ref.:01357).

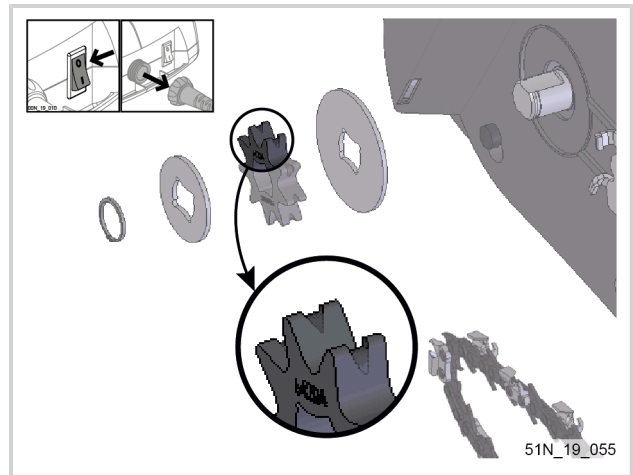

6.10. CLEANING THE CHAIN GUIDE

- Set the battery switch to "0" and disconnect the connector.
- Remove the chain guide (7) and the chain (6). (see Section 6.4, "REPLACING THE CHAIN AND THE CHAIN GUIDE".)
- Clean the groove, grease holes and the oblong hole of the chain guide
- Reassemble the chain guide and the chain.

Important

Disassemble the chain guide and clean at the groove of the chain and grease holes (see diagrams opposite). Repeat the operation daily.

Carry out this operation each time you change work sites in order to disinfect the tool a little.

Clean the lubricating holes as often as necessary.




6.11. GREASING THE ANTI-KICKBACK CHAIN GUIDE

Lubricate the chain wheel nose sprocket (7) every day using a grease gun (ref.: 68518) through the grease hole (see diagram opposite).

Note

Consumables sold separately.

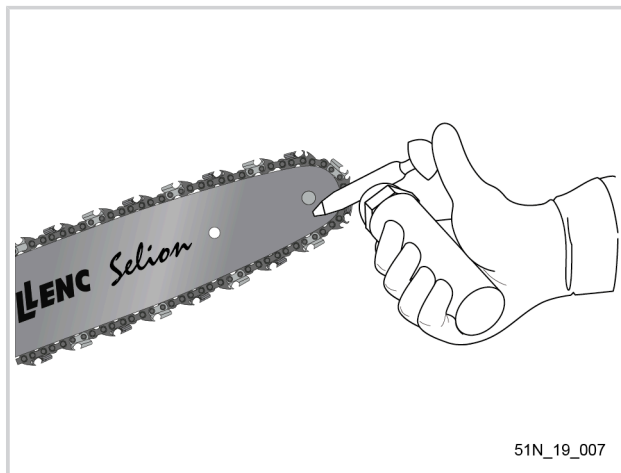

6.12. CLEANING THE TOOL

Keep the tool clean by cleaning it frequently using a damp cloth and compressed air.

Pay particular attention to the parts in contact with the wood (chain (6), chain guide (7)).



Warning

Ⓒ Never use solvents (trichloroethylene, white spirit, petrol, etc.) to clean the tool.

Set the battery switch to "0" and disconnect the connector.

6.13. FILLING THE CHAIN OIL RESERVOIR

- The oil reservoir must be kept clean.
- Clean the cap and the filling area before removing the cap.
- Do not allow the oil to overflow from the reservoir; wipe off any excess oil.



Warning

Ⓒ The oil reservoir is equipped with a strainer. If the oil does not reach the saw head, return the tool to your authorized distributor so that he can clean the strainer.

7. INCIDENTS AND TROUBLESHOOTING

Problem	Action
Loss of efficiency and/or cutting quality for the Chainsaw Selion M12	<p>First of all check that the 4 basic rules are respected</p> <ul style="list-style-type: none"> • Chain tension: Section 6.5, "Automatic chain tensioning" • Chain lubrication: Section 6.6, "Chain lubrication" • Sharpness of the chain: Section 6.7, "Sharpening the chain" • Adjusting the depth limiters: Section 6.8, "Adjusting the depth limiters" <p>If the problem persists, then proceed to:</p> <ul style="list-style-type: none"> • cleaning the chain guide: Section 6.10, "Cleaning the chain guide" • and when using an anti-kickback guide, to lubricating the anti-kickback chain guide: Section 6.11, "Greasing the anti-kickback chain guide" <p>Check the sprocket and replace it if necessary: Section 6.9, "Checking and replacing the sprocket".</p> <p>If none of these procedures succeeds in resolving the problem, contact a certified distributor or after-sales service PELLENC SAS.</p>
The Chainsaw Selion M12 will not start	<p>Check the following points:</p> <ul style="list-style-type: none"> • Check that the Chainsaw Selion M12 is correctly connected to the battery. • Check the battery charge level. <p>If none of these procedures succeeds in resolving the problem, contact a certified distributor or after-sales service PELLENC SAS.</p>

8. STORAGE AND TRANSPORT


8.1. CHAIN PROTECTION

Put on the chain protector (17) whenever transporting, handling and storing the tool.



Warning

Never transport the chainsaw without its protective cover.

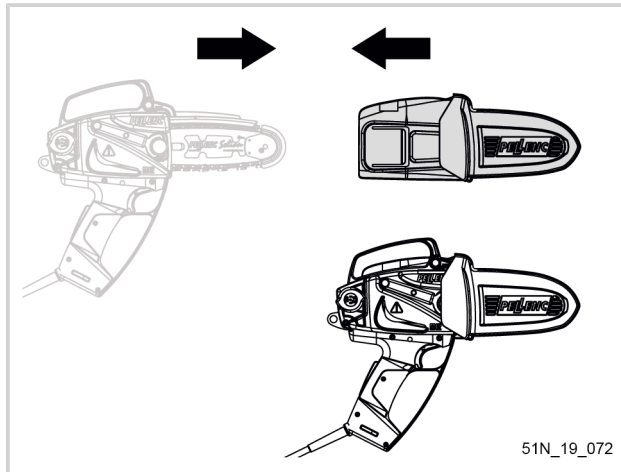

8.2. OFF-SEASON STORAGE


- Always clean the tool before storing it.
- Make sure the chain is sharp before storing the tool.
- Always store the tool with its chain guide greased.
- Empty the oil reservoir before storing the tool.
- Put on the chain protector (17) during transport and storage.

9. ACCESSORIES AND CONSUMABLES


9.1. ACCESSORIES

	References:
Grease pump for chain guide	68518
Retaining clamp	68519
Sharpening kit	68520
Round file (box of 12)	68521
Flat file (box of 12)	68522
Round file (pack of 3)	68611


9.2. OPTIONAL ACCESSORIES

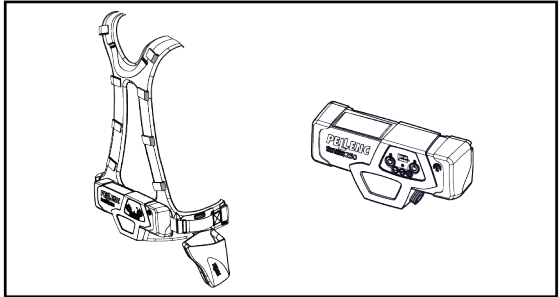Name	reference	
PELENC ULIB 250 battery pack	57107	


51_20_035

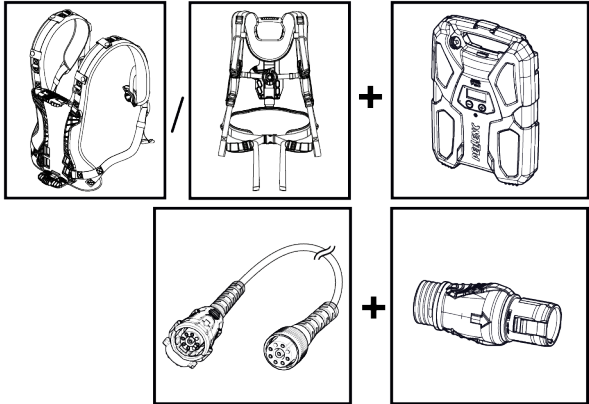Name	reference	
Comfort harness	57183	
Lightweight harness	57257	
PELENC ULIB 750 battery	57191	
Quick connect adapter	57262	
Extension cord	57238	

51_20_033

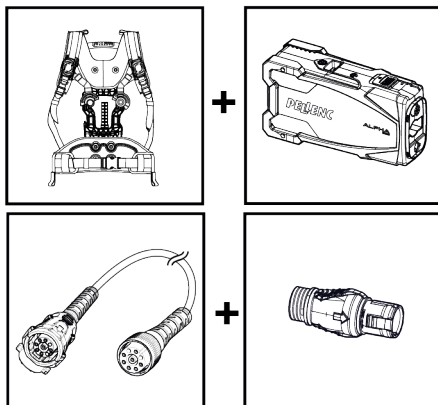Name	reference	
Alpha harness	57194	
PELLENC ALPHA 260 battery	57192	
PELLENC ALPHA 520 battery	57193	
Quick connect adapter	57262	
Extension cord	57248	

51_20_032

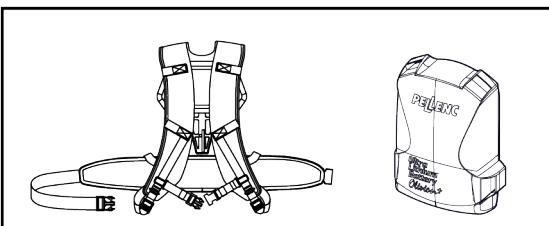Name	reference	
Olivion+ battery pack	57173	

51_20_034

9.3. CONSUMABLES

	References:
5L can of organic oil	116688
SELION 9 1/4 tooth chain sprocket wheel kit	79087
Anti-kickback chain guide (6" - 1/4") <i>compatible with chain ref: 71550</i>	78790
Carving chain guide (6" - 1/4") <i>compatible with chain ref: 71550</i>	80343
Chain (6" - 1/4") <i>compatible with chain guides ref: 78790 and 80343</i>	71550
Narrow gauge chain guide (6" - 1/4") <i>compatible with chain ref: 138880</i>	138778
Chain for narrow gauge chain guide (6" - 1/4") <i>compatible with chain guides ref: 138778</i>	138880

10. WARRANTIES

10.1. GENERAL WARRANTIES

10.1.1. STATUTORY WARRANTY

- 10.1.1.1. LATENT DEFECTS WARRANTY

Apart from the commercial warranty provided for under Article II, Article 1641 of the Civil Code provides that "the seller is bound to a warranty on account of latent defects of the object sold which render it unfit for the use for which it was intended, or which would impair said use to the extent that the buyer would not have acquired it, or would only have given a lesser price for it, had he known of them".

Article 1648 of the Civil Code "The action resulting from latent defects must be brought by the purchaser within two years after the discovery of the defect. "

- 10.1.1.2. LEGAL WARRANTY OF CONFORMITY

Article L.217-4 of the French Consumer Code "The seller delivers goods in conformity with the contract and is liable for defects of conformity existing upon delivery".

The seller is also liable for any lack of compliance resulting from the packaging, assembly or installation instructions whenever its contractual liability is engaged in this regard or the latter are carried out under its responsibility

Article L.217-5 of the French Consumer Code "Goods are compliant with the contract":

1. Where they are fit for the purpose normally expected of similar goods and, where applicable:
 - If it matches the description given by the seller and possesses the qualities that were presented to the purchaser in the form of a sample or model;
 - If it possesses the qualities that a purchaser can reasonably expect given the public statements made by the seller, the producer or its representative, especially in advertising or labelling;
2. Or, if it has the characteristics defined by mutual agreement of the parties or is fit for any particular purpose that the buyer made known to the seller and that the latter accepted.

Article L.217-12 of the Consumer Code "legal action resulting from lack of conformity lapses two years after delivery of the goods".

10.1.2. COMMERCIAL WARRANTYPELLENC

- 10.1.2.1. CONTENT

10.1.2.1.1. GENERAL INFORMATION

In addition to legal warranties, client users benefit from the commercial warranty on products PELLENC covering the exchange and replacement of parts recognised as being out of order, due to machining defects, assembly defects or material defects, whatever the cause.

The warranty is fully integral to the product sold by PELLENC.

10.1.2.1.2. SPARE PARTS

The commercial warranty also covers original PELLENC spare parts, excluding labour and to the exclusion of certain parts of each product provided at delivery.

- 10.1.2.2. DURATION OF THE WARRANTY**10.1.2.2.1. GENERAL INFORMATION**

PELLENC Products are guaranteed under the commercial warranty as from delivery to the customer for a period of two (2) years for products connected to a PELLENC battery, and for a period of one (1) year for other PELLENC products.

10.1.2.2.2. SPARE PARTS

PELLENC Replacement parts replaced under the product warranty are guaranteed under the commercial warranty as from delivery of the PELLENC product to the customer user for a period of two (2) years for products connected to a PELLENC battery, and for a period of one (1) year for other PELLENC products.

In the case of products connected to a PELLENC battery, parts that are replaced under the product warranty after the 12th month of use, are covered for a period of one (1) year.

10.1.2.2.3. WARRANTY EXCLUSIONS

Excluded from the commercial warranty are products that have been subject to abnormal use, or were used under conditions and for purposes other than those for which they were manufactured, especially in the case of non-compliance with conditions stipulated in this user manual.

It does not apply in case of shock, fall, neglect, lack of supervision or maintenance or in case of transformation of the product. Also excluded from the warranty are products that have been subject to tampering, alteration or modification by the client user.

Wear parts and/or consumables cannot be covered by the warranty.

- 10.1.2.3. IMPLEMENTATION OF THE COMMERCIAL WARRANTY**10.1.2.3.1. PRODUCT COMMISSIONING AND COMMISSIONING DECLARATION**

The DISTRIBUTOR undertakes to complete the computer commissioning declaration form, no later than eight days after the delivery of the property to the user customer, in order to activate the latter on the www.pellenc.com website under "warranties and training" in the "extranet" menu, using the identifier previously provided to them by PELLENC.

Failing that, commissioning declaration will not be effective and implementation of the commercial warranty PELLENC will not occur. As a consequence thereof, the DISTRIBUTOR must ensure the financial burden of its intervention under the warranty without being able to pass on the cost to the client user.

The DISTRIBUTOR shall also undertake to complete the warranty card or the certificate of warranty and commissioning for self-propelled equipment provided with the product after having the client user sign and date it.

10.1.3. PAID AFTER-SALES SERVICE**- 10.1.3.1. GENERAL INFORMATION**

Malfunctions, breakdowns, breakages resulting from misuse, neglect or improper maintenance by the client user as well as malfunctions resulting from normal wear of the product are subject to the payment of after-sales service, even during the period of the legal and commercial warranty. After-sales service repairs that fall outside of the legal and commercial warranty also include maintenance, adjustments, diagnostics of all types, and cleaning without the present list being exhaustive.

- 10.1.3.2. WEAR PARTS AND CONSUMABLES

Wear parts and consumables also fall within the after-sales service.

- 10.1.3.3. SPARE PARTS

Paid after-sales service also covers original PELLENC spare parts, excluding labour and outside the legal and commercial warranty period.

In case of replacement of original PELLENC spare parts in the context of after-sales service, said latter are covered by a warranty of one year as from the installation date.

11. COMPLIANCE STATEMENTS

11.1. "EC" DECLARATION OF CONFORMITY: SELION M

MANUFACTURER	PELLENC
ADDRESS	Quartier Notre-Dame - 84120 Pertuis (France)
ENTITY AUTHORIZED TO COMPILE THE TECHNICAL FILE	PELLENC
ADDRESS	Quartier Notre-Dame - 84120 Pertuis (France)

We hereby declare that the machine referred to below as:

GENERIC DENOMINATION	Chainsaw		
FUNCTION	Intended for pruning		
COMMERCIAL NAME	Selion Manual		
TYPE	Selion M		
MODEL	M12		
SERIAL No.	53U00001 - 53U49999	53V00001 - 53V49999	53W00001 - 53W49999

Complies with the relevant provisions of the machinery directive (2006/42/EC).

Complies with the provisions of the following European Directives:

- 2014/30/EU EMC Directive; 2011/65/EU ROHS Directive; 1907/2006 REACH Regulation; 2012/19/EU WEEE Directive

The following harmonised European standards have been used in whole or in part:

- EN 60745-1:2009 + A11:2010 ; EN 60745-2-13:2009 + A1:2010 ; EN 55014-1:2017

Obtained a "CE" type exam certificate, No.MD-160 issued by SGS-FIMKO (0598).

Sound level at the maximum operating rating

Measured sound power according to Directive 2000/14 /EC	L _{WA} = 95 dB(A)
Guaranteed sound power according to Directive 2000/14/EC	L _{WA,d} = 98 dB(A)

SIGNED IN PERTUIS, DATED 11/06/2021
 JEAN-MARC GIALIS
 CEO



PELLENC

   www.pellenc.com

PELLENC
Quartier Notre Dame - 84120 Pertuis (France)

